


SEAT ADAPTER KIT #88120 INSTALLATION INSTRUCTIONS



3407-03




ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

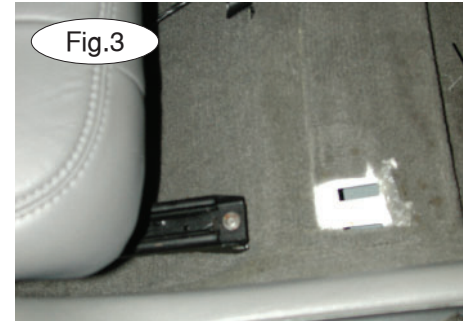

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit. Remove the plastic seat track covers from the front (Fig.1). Move the seat all the way forward and remove the plastic seat track covers from the back. Now remove the bolts from the rear of the seat track (Fig.2).

2. With the seat all the way back, lift up on the back of the seat and slide the front of the seat out of the slots (Fig.3).

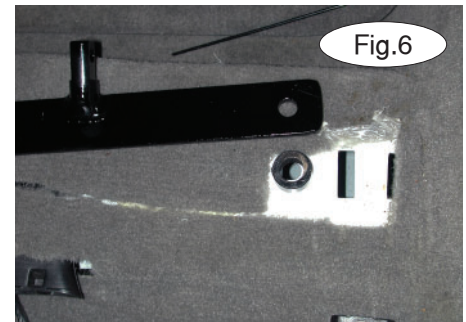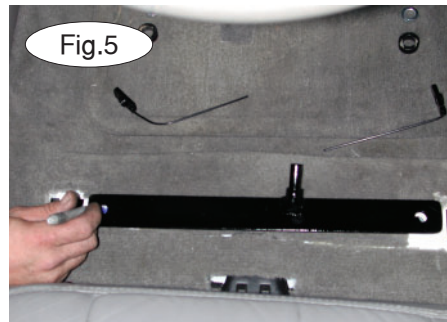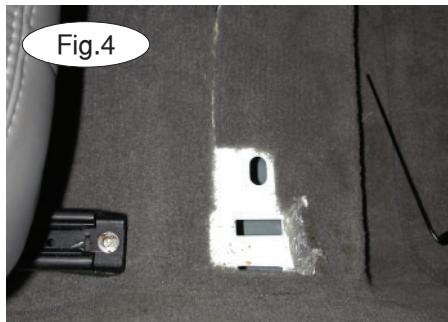

3. Trim carpet on both sides to allow for installation of the bracket (Fig.4).

4. Align the adapter with the inside hole on the side closest to the passenger's seat. Using the adapter as a template, mark the spot for the drilling of the hole on the side closest to the driver's side door (Fig.5) Now drill a 1/2" hole.

5. Place a 1/2" pipe spacer over both the inside most holes (Fig.6). Place the bracket on top of the spacers.

6. Put the T-nut through the existing outside slots closest to the holes with the spacers on them (Fig.7). Line up the T-nut with the spacer and bolt. Repeat for the other side. Break off the wire attached to the T-nuts and tighten bolts (Fig.8).





1-800-669-9690

SEAT ADAPTER KIT #88120 INSTALLATION INSTRUCTIONS



3407-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

7. Replace the seat by reversing step 2.
8. Trim the plastic seat track covers to fit back over the front seat tracks (Fig.9).
9. Move the seat all the way forward and replace the two bolts in the back. Now replace the back plastic seat track covers.
10. Attach the BrakeMaster to the mounting post and brake pedal, following the instructions in the owner's manual (Fig.10).

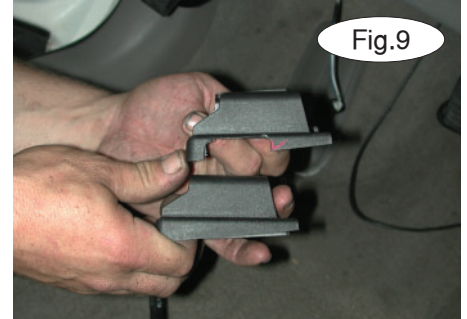


Fig.9

Parts List

- (2) 1/2" x 1 1/2" bolts
- (2) 1/2" lock washers
- (2) 1" x 3/8" x .219 wall pipe spacer
- (2) 1/2" T-nut with wire

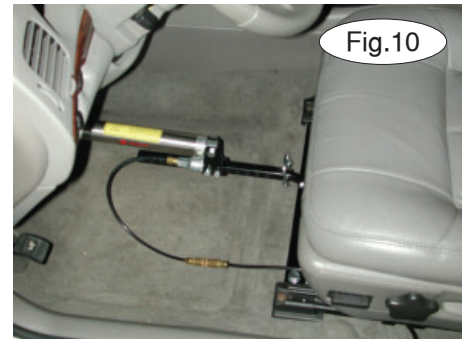


Fig.10



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.