


SEAT ADAPTER KIT #88140 INSTALLATION INSTRUCTIONS



3798-07

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

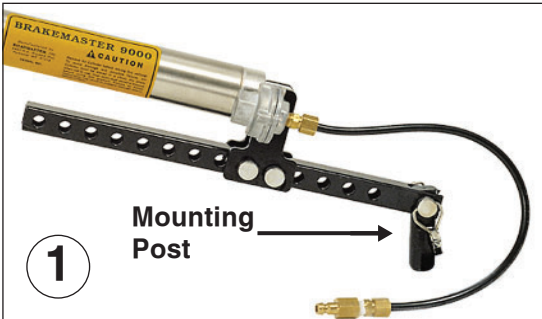

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the two plastic seat track covers (they will not be replaced). Then, remove the 13mm (head) factory seat track mounting bolts (Fig.2). *Note:* for newer models, the bolts may be two T55 Torx bolts instead.

3. Using the supplied 10mm x 1.25 x 60mm bolts, flat washers, lock washers and the 1" x 1-1/8" x .188 wall pipe spacers, bolt the seat adapter into the weld nuts you removed the factory bolts from. *Note:* all Ford Fusion models use the two supplied 10mm x 1.5 x 60mm bolts. *Note:* place the pipe spacers between the seat track mounting holes and the seat adapter. Figure 3 shows the finished installation.

Parts List

- (2) 10mm x 1.25mm x 60mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1 x 1-1/8" x .188 wall pipe spacer
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer

For 2006 and later Ford Fusions:
(2) 10mm x 1.5 x 60mm bolts



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.