

1-800-669-9690




SEAT ADAPTER KIT #88239 INSTALLATION INSTRUCTIONS



3863-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE


ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

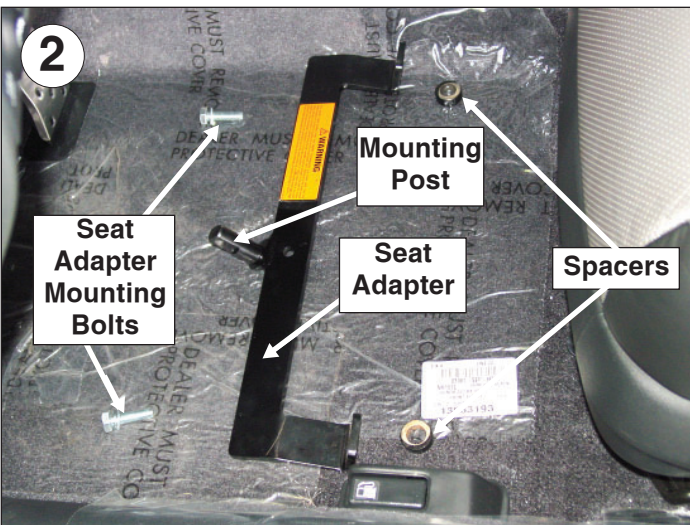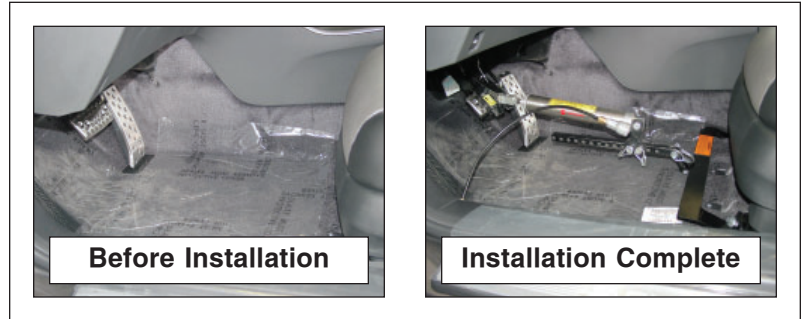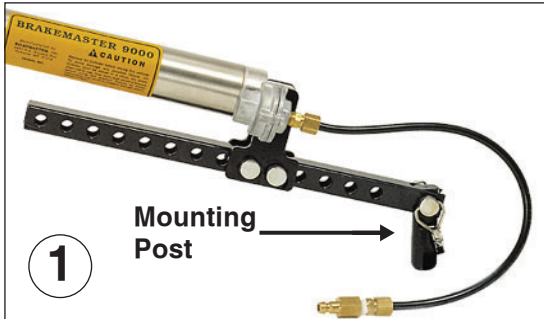

- ## Parts List
- (1) 3/8" lock washer
 - (1) 3/8" x 3/4" bolt
 - (2) 10mm x 1.25 x 35mm bolt
 - (2) 10mm lock washer
 - (2) 3/8" x 1" x .188 wall pipe spacer

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the stock 14mm (head) bolts from the front of the seat track. Now, bolt the seat adapter in place with the 10mm x 1.25 x 35mm bolts, lock washers and the 3/8" x 1" x .188 wall pipe spacers (place the spacers between the seat track and seat adapter).

 **WARNING** Failure to follow these instructions can result in property damage, personal injury or even death.