



SEAT ADAPTER KIT #88306 INSTALLATION INSTRUCTIONS



4977-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

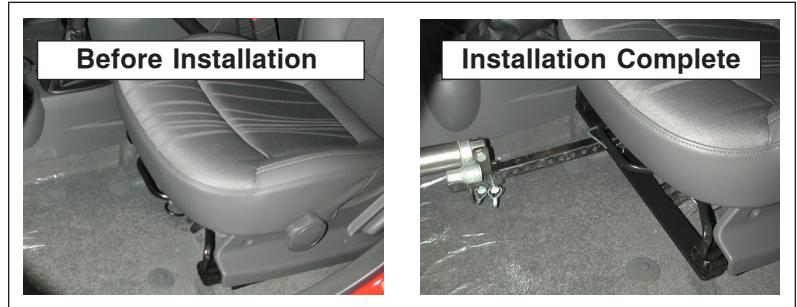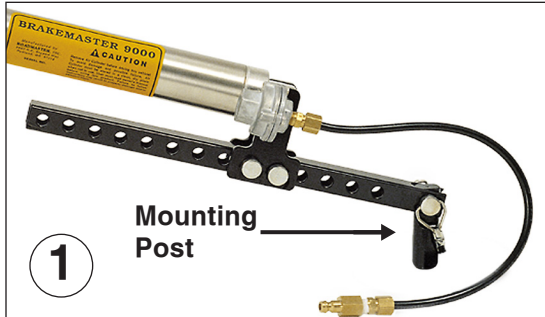

Instructions

1. Secure the mounting post (Fig.1) to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adapter has a countersunk hole, you must use the Allen head bolt and lock washer included with this kit.

2. Push the driver's seat all the way back.

3. Position the seat bracket underneath the seat tracks, aligning the holes in the seat bracket to the existing holes in the seat track (Fig.2).

Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

4. On each side, place one of the provided 8mm lock washers over one of the 8mm x 1.25 x 20mm bolts. Bolt up through the seat bracket and the seat tracks. Finish with the 8mm nut.

Parts List

- (2) 8mm x 1.25 x 20mm bolts
- (2) 8mm lock washers
- (2) 8mm 1.25 nuts
- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.