



SEAT ADAPTER KIT #88307 INSTALLATION INSTRUCTIONS



4999-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

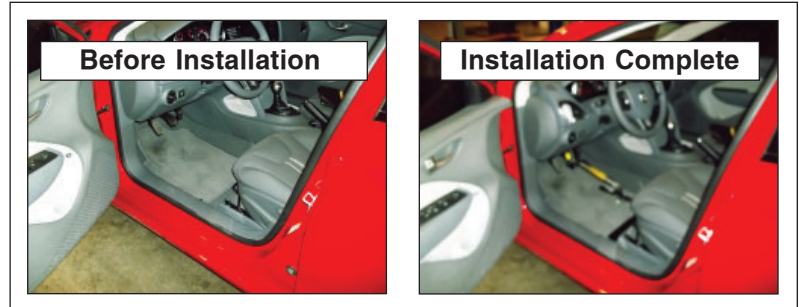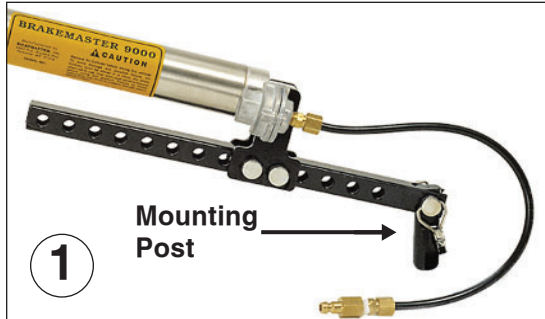

Instructions



1. Secure the mounting post (Fig.1) to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adapter has a countersunk hole, you must use the Allen head bolt and lock washer included with this kit.

2. Push the front seat all the way back. Now, remove the front seat track covers (Fig.2) and remove the two 18mm (head) front seat track bolts (Fig.3). **Note: the seat track covers will not be replaced.** **Note: some 2014 and later models may have MORTORQ® bolts instead of Torx. If this is the case, you will need a PFMTS2E bit. It can be ordered from your local Snap-On dealer.**



3. Place the seat adapter between the seat tracks and the floor and over the holes you exposed in step 2. Replace the T40 Torx bolts (Fig.3). **Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal.** The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.