




SEAT ADAPTER KIT #88342 INSTALLATION INSTRUCTIONS



5919-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

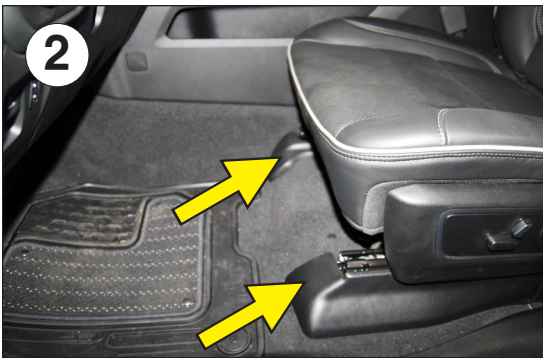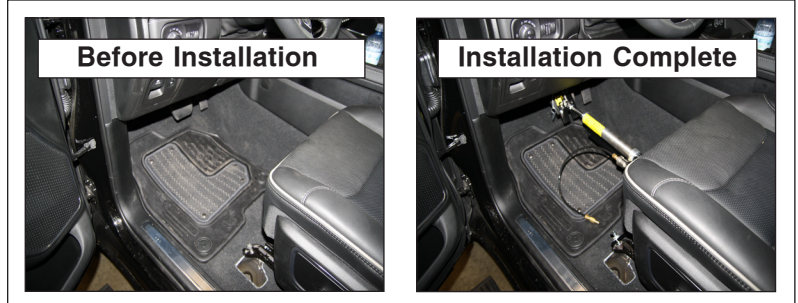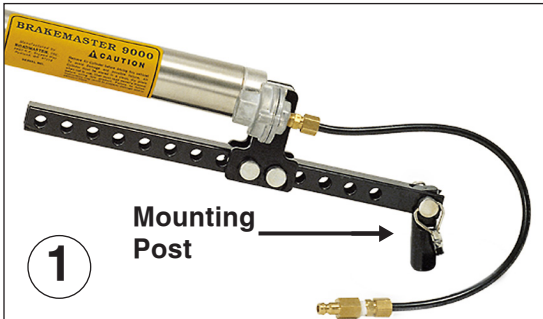

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is counter-sunk, use the Allen head bolt and lock washer included with this kit.
2. Slide the front seat as far back as it will go. Re-move two plastic seat track covers indicated in Figure 2. Then, remove the two exposed E12 Torx seat track bolts (Fig.3).
3. Place the supplied 1" O.D. x .188 x 1/2" wall pipe spacer over each of the holes you exposed in the previous step. Then, place the seat adapter over them, ensuring that the slotted hole is on the driver's side and then bolt down through each hole using the supplied 10mm x 1.5 x 45mm bolt, 10mm lock washer and 3/8" flat washers (Fig.4). Trim the seat track covers and reinstall them, or leave them off completely.
4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the Brake-Master is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

Parts List

- | | |
|-------------------------|-----------------------------|
| (1) 3/8" lock washer | (2) 10mm x 1.5 x 45mm bolts |
| (1) 3/8" x 3/4" bolt | (2) 10mm lock washers |
| (2) 1" O.D. x .188 wall | (2) 3/8" flat washers |
| | x 1/2" pipe spacers |

! WARNING Failure to follow these instructions can result in property damage, personal injury or even death.