



1-800-669-9690



SEAT ADAPTER KIT #88346 INSTALLATION INSTRUCTIONS



5950-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

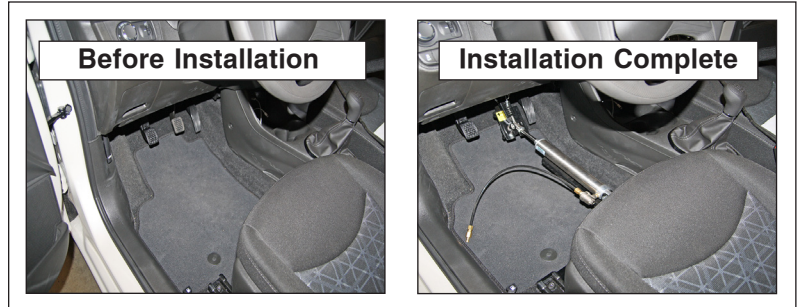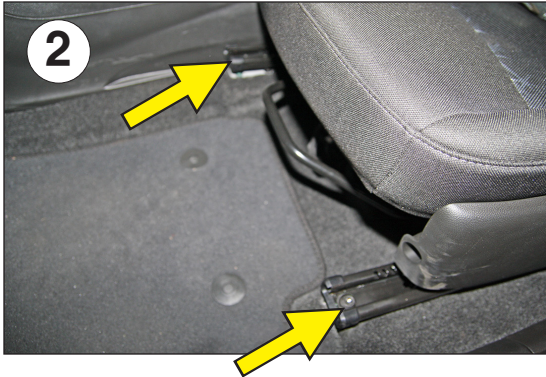

Instructions

1. Slide the front seat as far back as it will go, and then remove two T50 Torx seat track bolts attaching the seat track to the vehicle's frame (Fig.1).
2. Place the seat adapter under the seat frame with the post offset toward the passenger side. *Note:* make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Also, make certain that the cut-outs in the seat adapter align with the posts on the seat track bottoms before replacing and tightening the bolts removed in the previous step (Fig.2).
3. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

 **WARNING** Failure to follow these instructions can result in property damage, personal injury or even death.