



SEAT ADAPTER KIT #88352 INSTALLATION INSTRUCTIONS



#6039-00 06-19

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

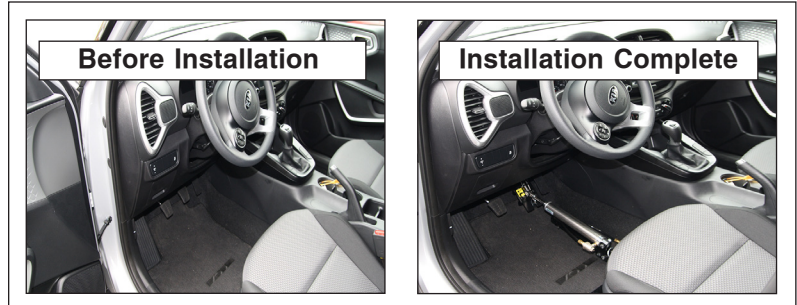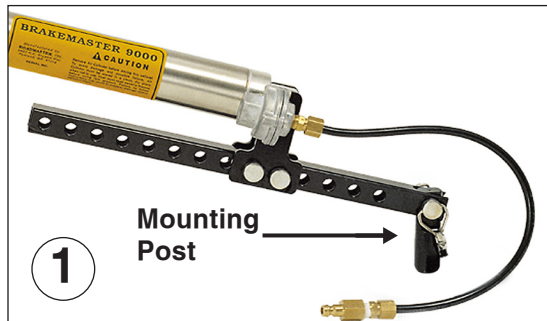

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) M10 lock washers
- (2) 3/8" flat washers
- (2) M10 x 45mm bolts
- (2) 1" O.D. x .188 wall x 3/8" pipe spacers

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Push the driver's seat back and remove two 14mm (head) seat track bolts (Fig.2).
3. Place a 1" O.D. x .188 wall x 3/8" pipe spacer between the adapter and the outside of the seat rail. Then bolt it into place using two M10 x 1.25 x 45mm bolts, 10mm lock washers and 3/8" flat washers (Fig.3).
4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes. Now, tighten all bolts.

CAUTION

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.