


SEAT ADAPTER KIT #88357 INSTALLATION INSTRUCTIONS



6112-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

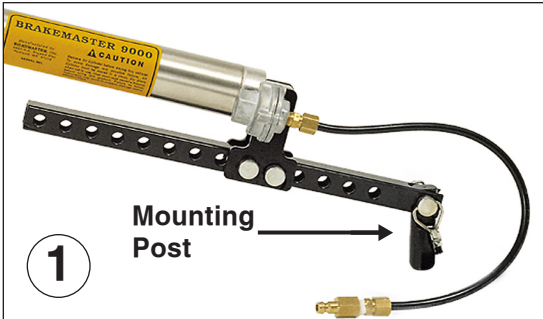

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Push the seat back as far as it will go. Remove the two plastic seat track covers (Fig.2) to expose the T55 Torx bolts (Fig.3). Remove the bolts.
3. Place the two 1 1/2" pipe spacers over the mounts you just exposed and place the seat adapter over the pipe spacers. Use the two M10 x 1.5 x 75mm bolts, 10mm lock washers and 3/8" flat washers to bolt through the seat adapter, pipe spacer and into the floor pan (Fig.4).
4. *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
5. Attach the air cylinder to the adapter.

Parts List

- | | |
|-----------------------------|-------------------------|
| (1) 3/8" x 3/4" bolt | (2) 10mm lock washers |
| (1) 3/8" lock washer | (2) 3/8" flat washers |
| (2) 10mm x 1.5 x 75mm bolts | (2) 1 1/2" pipe spacers |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.