




# SEAT ADAPTER KIT #88360 INSTALLATION INSTRUCTIONS



6144-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

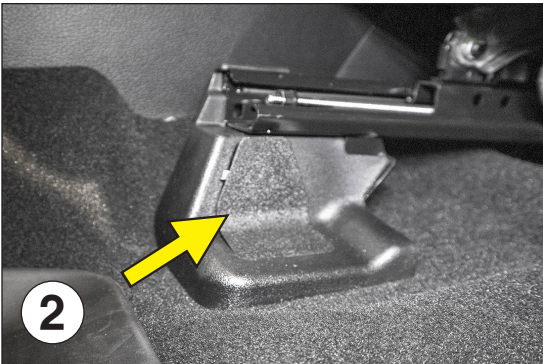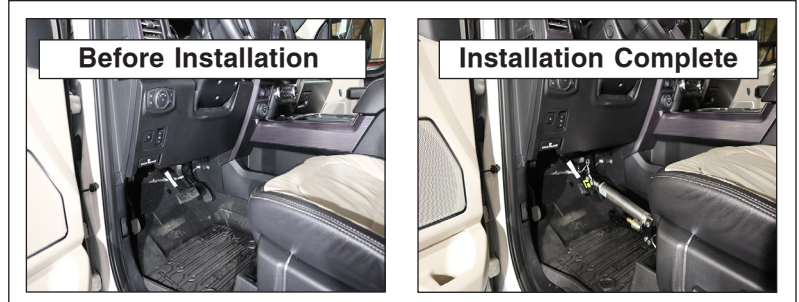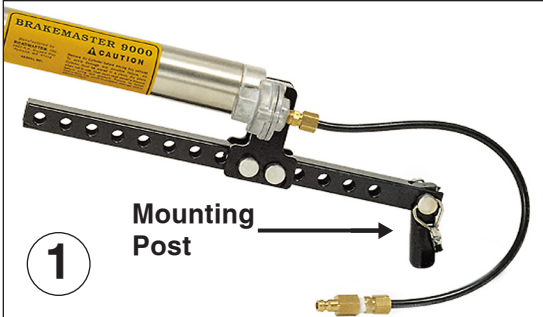

## Instructions

1. Move the seat back as far as it will go. On each side, remove the seat track cover (Fig.2 – passenger side) and then use a 13mm socket to remove the seat track bolt (Fig.3 – passenger side).
2. On each side, place a 1" O.D. x .188" wall x 1-11/16" pipe spacer over each of the holes you exposed in the previous step. Then, place the seat adapter over the pipe spacers and using a M10 x 1.5 x 75mm bolt, M10 lock washer and 3/8" flat washer, bolt down through the seat adapter, pipe spacer, seat track and into the floor pan (Fig.4).
3. Attach the air cylinder to the adapter. *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

### IMPORTANT

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.

### Parts List

- |                             |                           |
|-----------------------------|---------------------------|
| (1) 3/8" x 3/4" bolt        | (2) 10mm lock washers     |
| (1) 3/8" lock washer        | (2) 3/8" flat washers     |
| (2) 10mm x 1.5 x 75mm bolts | (2) 1-11/16" pipe spacers |



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.