


SEAT ADAPTER KIT #88363 INSTALLATION INSTRUCTIONS



#6175-00 09-20

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

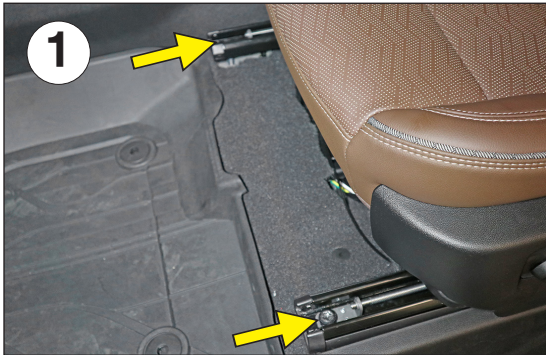

Instructions

1. Push the driver's seat back as far as possible. Then, remove the two T50 Torx bolts attaching the seat tracks to the floor pan (Fig.2).
2. Tilt the seat back slightly and place the seat adapter under the seat track, ensuring that the spacer on the bottom of the passenger side seat rail nests into the square cutout on the seat adapter. Then, replace the T50 Torx bolts.
3. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes. Now, tighten all bolts.

IMPORTANT

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.