



SEAT ADAPTER KIT #88364 INSTALLATION INSTRUCTIONS



#6188-00 01-21

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

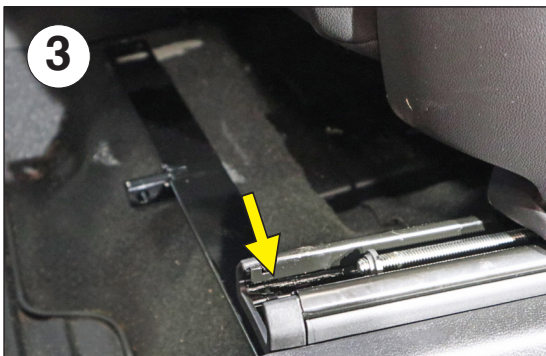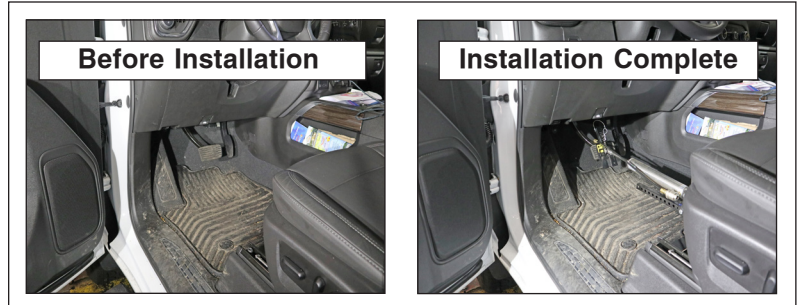

Instructions

1. Push the driver's seat as far forward as possible. Loosen but do not remove the two rear T50 Torx seat track bolts attaching the seat to the floor pan (Fig.1). Then, slide the seat all the way back.
2. Completely remove the two front T50 Torx attaching the seat to the floor pan (Fig.2 – driver's side shown).
3. Tilt the seat back and place the seat adapter over the mounts you just exposed (Fig.3). Ensure that the end with the square cutout is toward the passenger side. Lower the seat onto it, ensuring that the protrusion on the bottom of the seat nests into the cutout (Fig.4).
4. Replace the T50 Torx bolts. Push the seat as far forward as possible, ensuring that there aren't any obstructions. Then, re-tighten the rear bolts.
5. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes. Now, tighten all bolts.

IMPORTANT

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.