



# SEAT ADAPTER KIT INSTALLATION INSTRUCTIONS

**KIT# 88369**

09/2024  
RS



ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.RoadmasterInc.com

## Instructions

**Until specified only finger tighten all bolts and nuts.**

1. Locate the mounting post (Fig.A) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Under the driver's seat, locate and remove the covers that obscure the bolts on both sides of the seat (Fig.B).

3. On each side, remove two recessed 10mm bolts under driver's seat.

4. In each recess, install in the bolts place a 1 1/2 - 0.188 x 1" Tube Spacer (Fig.C).

5. Place the Seat Bracket onto the spacers and, using two 10mm x 1.5 x 70mm bolts and the fender washer, secure the Seat Bracket to the spacers (Fig.D).

6. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes. Now, tighten all bolts (Fig.E).

### IMPORTANT


**Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.**

Need Help? Call Toll-Free

1-800-669-9690

### Installation

Before

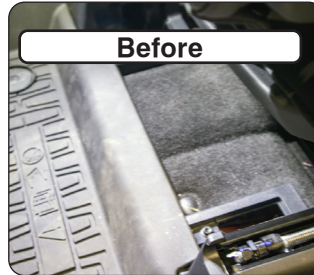


Complete



### Parts List

- |           |                                      |           |
|-----------|--------------------------------------|-----------|
| (1) ..... | 3/8" X 3/4" BOLT .....               | 350053-00 |
| (1) ..... | 3/8" LOCK WASHER .....               | 350305-00 |
| (2) ..... | 10MM LOCK WASHER .....               | 355715-00 |
| (2) ..... | 10MM FLAT WASHER .....               | 355710-00 |
| (2) ..... | M10 X 1.5 X 70MM BOLT .....          | 356113-00 |
| (2) ..... | 1 1/2 - 0.188 X 1" TUBE SPACER ..... | A002898   |
| (1) ..... | SEAT BRACKET .....                   | A006724   |

Fig.A

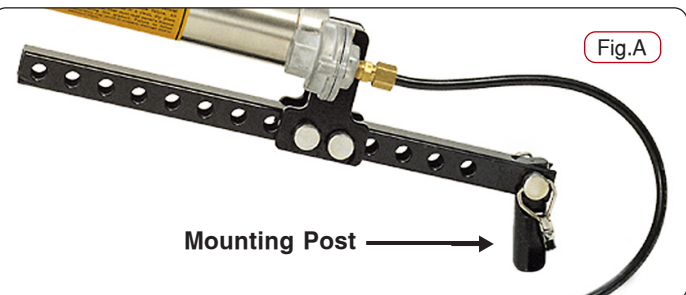

Mounting Post

Fig.B

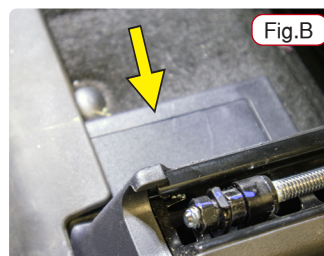


Fig.C

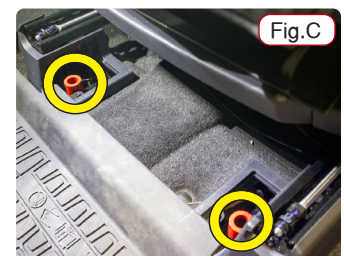


Fig.D


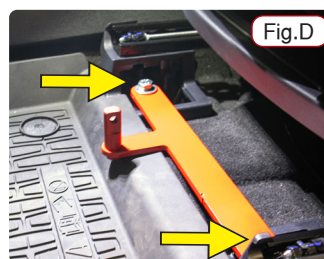


Fig.E

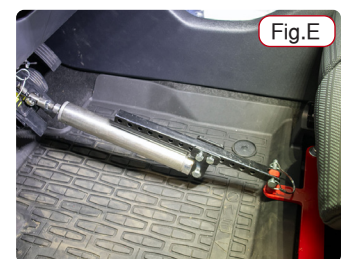

**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.