



SEAT ADAPTER KIT INSTALLATION INSTRUCTIONS

KIT# 88373

12/24
RS

ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407

www.RoadmasterInc.com

Instructions

Need Help? Call Toll-Free

1-800-669-9690

Until specified only finger tighten all bolts and nuts.

1. Locate the mounting post (Fig.A) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Under the driver's seat, locate and remove two T50 bolts in the front rails and loosen the two on the back of the rails (Fig.B).

3. Place the Seat Bracket, sliding it under the rails, then use two T50 bolts to secure the Bracket in place (Fig.C).

4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes. Now, tighten all bolts.

IMPORTANT

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.

Installation

Before



Complete




**Due to manufacture variance your interior may differ to the photos provided*

Parts List

- (1) 3/8" X 3/4" BOLT350053-00
- (1) 3/8" LOCK WASHER350305-00
- (1) SEAT BRACKET B004336

Fig.A

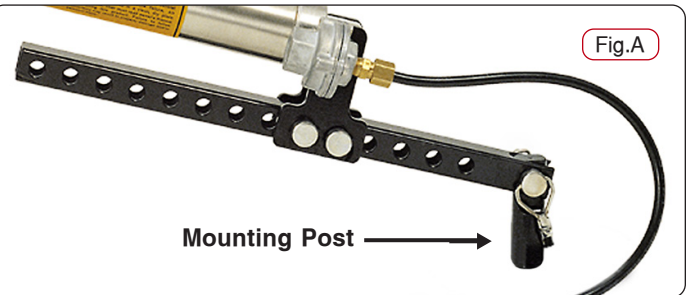


Mounting Post →

Fig.B



Fig.C

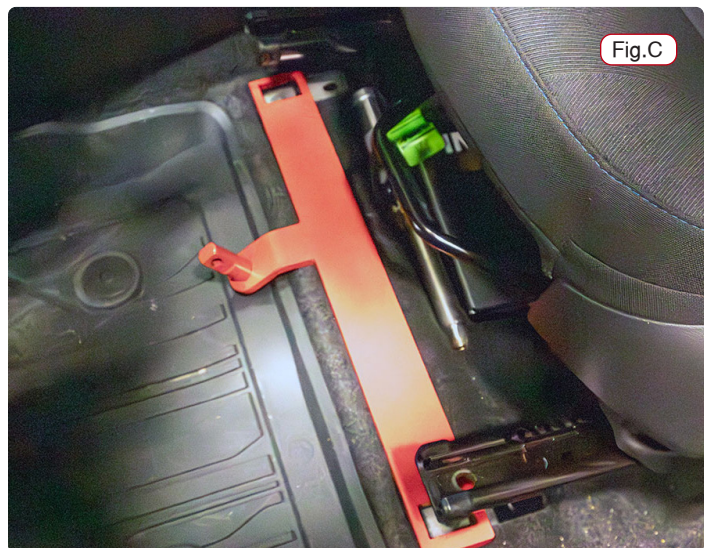

WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.