




STEERING STABILIZER INSTALLATION INSTRUCTIONS

KIT# RBK30

85-6226-01
06-22

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

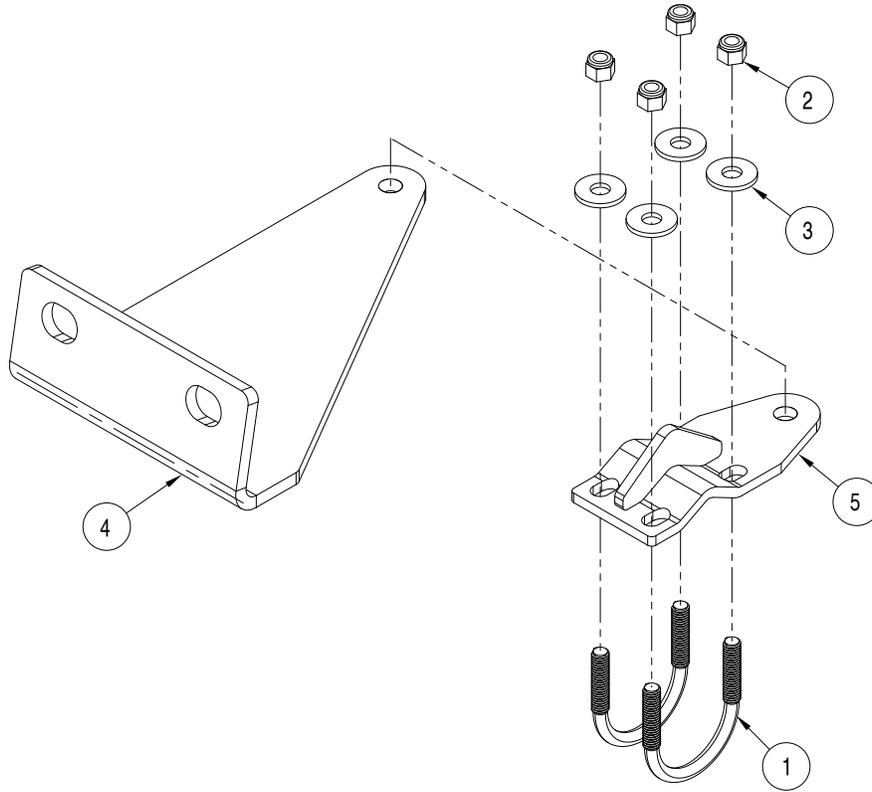

ITEM	QTY.	DESCRIPTION	PART NUMBER
1.....	2.....	U BOLT	350086-00
2.....	4.....	3/8-16 NYLON INSERT LOCK NUT	350255-00
3.....	4.....	M10 FLAT WASHER.....	355710-00
4.....	1.....	AXLE BRACKET.....	B1071
5.....	1.....	TIE ROD BRACKET	B802

WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.

- The installer must read the instructions and use all bolts and parts supplied. Failure to securely fasten the stabilizer could result in loss of the stabilizer, damage to the vehicle, personal injury or even death.
- There must be adequate clearance between the Steering Stabilizer and all chassis and steering parts, and any other components, or non-warranty damage to the vehicle will result. After final installation, the installer must inspect the stabilizer to ensure adequate clearance. Some minor adjustments may be needed to achieve this; always verify that the steering wheel remains centered before and after these adjustments.
- Always test drive the vehicle to confirm the steering wheel settings. If the vehicle pulls to either side, the center positioning must be adjusted. If the steering wheel does not return to the center position, the tie rod bracket may require minor adjustments. Failure to adjust the center positioning may result in a loss of vehicular control.
- After installing this Steering Stabilizer, any technician who is performing alignment or suspension work on the motorhome must loosen the tie-rod bracket to adjust the toe; the technician must also re-adjust the steering damper. Failure to adjust the center positioning may result in a loss of vehicular control.
- Regardless of year, make and model, a wide range of options for specific applications may or may not interfere with the installation. It is the

installer's responsibility to make certain that equipment is not damaged once the suspension solution travels through the full range of motion. Failure to ensure adequate clearance could result in non-warranty property damage, personal injury or even death.

- If running changes were made by the vehicle manufacturer after this kit was designed, some bolts or other fasteners in the included hardware pack may no longer be the correct size. It is the installer's responsibility to verify that the stabilizer is securely fastened to the vehicle, and fitted with the correct hardware, to account for these changes. Failure to securely fasten the stabilizer could result in loss of the stabilizer, damage to the vehicle, personal injury or even death.
- Except to adjust for running changes to the vehicle, use only the parts supplied by ROADMASTER to install the stabilizer. Using substandard grade parts or parts of the wrong size may result in loss of the stabilizer, damage to the vehicle, personal injury or even death.
- Once a year, the owner must inspect the fasteners for proper tightness and/or torque, according to the bolt torque requirements chart in these instructions. Failure to securely fasten the stabilizer could result in loss of the stabilizer, damage to the vehicle, personal injury or even death.
- Do not use an air impact wrench when reinstalling bolts, as stripped threads may result.
- This stabilizer is only warranted for the original installation. Installing a used stabilizer on another vehicle is not recommended and will void the warranty.



STEERING STABILIZER INSTALLATION INSTRUCTIONS

KIT# RBK30

85-6226-01
06-22

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

IMPORTANT

Before installing the steering stabilizer, inspect the drag link and tie rod ends, as well as the steering components. If they are excessively worn and/or have excessive play, they will cause handling problems that the steering stabilizer will not fix. Replace worn components before installing the stabilizer to achieve the best results.



Note: Roadmaster makes multiple steering stabilizers. The unit depicted in these instructions may vary from your unit but all stabilizers will follow these instructions. If installing a Reflex, ensure that the spring is fully-seated in its track on the collar of the unit. If it is installed without the spring fully-seated in its track, the unit could malfunction or otherwise fail to operate properly (Fig. 1).

1. Center the steering wheel and lock it into place.

IMPORTANT! If the tires are not straight ahead, then the vehicle will pull to one side after the installation. To prevent this and further adjustments after the test

drive, make sure the steering is truly straight ahead before continuing. Then, use an 1/8" socket and wrench to remove two horizontal bolts securing the air bag bracket to the axle.

2. Using the factory hardware, install the B1071 axle bracket to the back side of the axle where the tie rod is located. *Note: If you are installing this kit with a 1249-101 front sway bar, wait to secure the axle bracket when you are installing the sway bar, as the factory hardware will not be reused.* Otherwise, use Loctite on the bolts and torque them to 280 ft-lbs (Fig.2).

3. Using the supplied 1/2" hardware, install the base of the RSSA to the axle bracket and tighten the bolt. then loosely install the tie rod bracket to the top side of the tie rod. Loosely install the top of the RSSA to the tie rod using the 1/2" hardware (Fig.3).







STEERING STABILIZER INSTALLATION INSTRUCTIONS

KIT# RBK30

85-6226-01
06-22

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

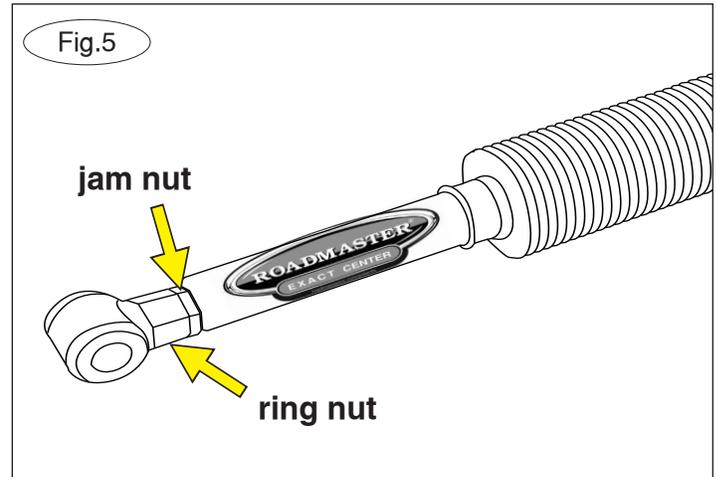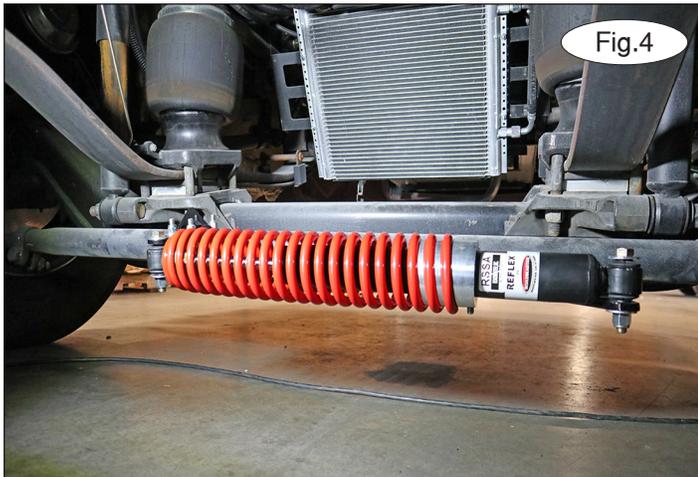

4. **For Exact Center installations:** Proceed to step 5. **For Reflex installations:** Test drive the vehicle to make certain that the stabilizer is adjusted properly. If the steering pulls to either side, center it by loosening the bracket U-bolts at the tie rod, and then reposition it. Tighten the bolts and test drive it once again, repeating the process until the proper adjustment is achieved. **This concludes the installation of the Reflex (Fig.4).**

5. **For Exact Center installations:** First, ensure that the suspension is loaded. Then, tighten the jam nuts against the ring nuts on each end. **Note: Hold the Exact Center unit in place so that it does not rotate when you tighten the jam nuts.** Test drive the vehicle and ensure that it is not pulling to the left or right. If it needs to be adjusted, follow step 6.

6. **IMPORTANT** Several micro-adjustments may be needed before the fit is dialed in (Fig.5). A left pull can be corrected by shortening the unit, a right pull can be corrected by lengthening the unit. **Important Notes: Only loosen one jam nut at a time when adjusting. Be sure the jam nuts are tightened against the END and not the body. Do not exceed a distance of 3/8" between the jam nut and unit body.**

7. Straighten the dust boot as needed to ensure smooth operation of the unit. **This concludes the installation of the Exact Center.**