




BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1

03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

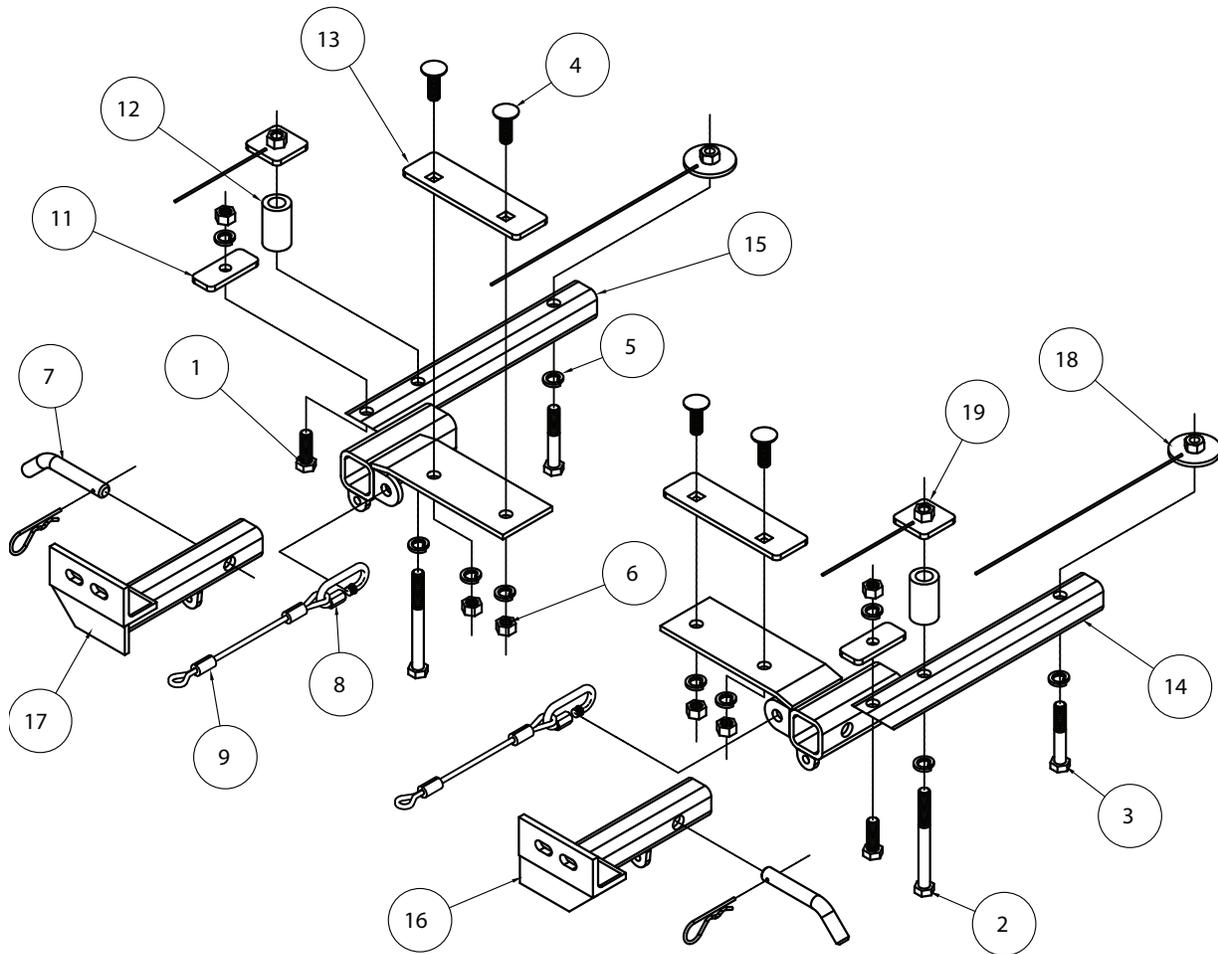

Item	Qty.	Length	Width	Description	Part #
1.....	2	1 1/2"	1/2"	BOLT.....	350095-00
2.....	2	5"	1/2"	BOLT.....	350107-00
3.....	2	3"	1/2"	BOLT.....	350101-00
4.....	4	1 1/4"	1/2"	CARRIAGE BOLT.....	350361-00
5.....	10		1/2"	LOCK WASHER.....	350309-00
6.....	6		1/2"	NUT.....	350258-00
7.....	2			DRAW PIN/SPRING PIN.....	357035-00
8.....	2			CABLE CONNECTOR.....	200008-00
9.....	2	8"		8000lb. SAFETY CABLES.....	650648-08
10.....	6			PLASTIC POP RIVET.....	350431-00
11.....	2			1/4" x 1 1/4" x 2-1/2" BACKING PLATE.....	A000228
12.....	2			1 1/4" DIA x 2 1/8" LONG ROUND TUBE.....	A000960
13.....	2			2" x 7" SQUARE HOLE BACKING PLATE.....	A-001784
14.....	1			DRIVER SIDE RECEIVER BRACE WELDMENT.....	C001110
15.....	1			PASSENGER SIDE RECEIVER BRACE WELDMENT.....	C001111
16.....	1			DRIVER SIDE ARM BRACE WELDMENT.....	C001112
17.....	1			PASSENGER SIDE ARM BRACE WELDMENT.....	C001113
18.....	2			ROUND NUTTED BACKING PLATE WELDMENT.....	C001120
19.....	2			2" SQUARE NUTTED BACKING PLATE WELDMENT.....	C001121



BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1

03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

2005 - 2010 Jeep Grand Cherokee Instructions

This bracket kit fits the 2006-2010 Jeep Commander and the 2005-2010 Jeep Grand Cherokee. Follow the instructions below for the Jeep Grand Cherokee; for the Jeep Commander, see the separate section included in these instructions.

This is one of our crossbar-style baseplates, which allows the visible front portion to be easily removed from the front of the vehicle (Fig.A and Fig.B). The baseplate kit consists of two receiver braces, front braces, and a hardware pack.

Before starting the installation, lay out the kit components in order as they will be used. This will give you a visual idea of how the components work, and will also confirm that everything is present and accounted for.



IMPORTANT: All baseplates *must* be assembled with all the bolts left loose for final adjustment and positioning (before tightening) unless otherwise instructed. All bolts *must* be torqued for proper strength. If more than one bolt is used per fastening point, the diagram may only show one. Use flat washers over all slotted holes and lock washers on all fasteners.

WARNING

Failure to heed these warnings or follow the installation instructions may result in a voided warranty, loss of towed vehicle, personal injury or death.

- Do not weld or modify this baseplate or its components. Welding or modification will void the warranty.
- Do not use this document as a basis to design/fabricate a baseplate, as it may not show all parts or structural components.
- We strongly recommend professional installation.
- If the towed vehicle has been in an accident, it must be properly repaired before attaching the baseplate. Do not install the baseplate if any structural frame damage is found.
- The installer must use all bolts and parts supplied. If running changes were made by the vehicle manufacturer after this kit was designed, some bolts or other fasteners may no longer be the correct size. It is the installer's responsibility to verify this kit is securely fastened to the vehicle.
- Use Loctite® Red on all bolts used to secure this baseplate. Torque all bolts to the specifications found at the end of these instructions. Do not over-torque the bolts or failure may occur.
- The installer must inspect the baseplate to ensure adequate clearance, particularly around hoses, air conditioner lines, radiators, etc. or non-warranty failure may result.
- Roadmaster manufactures many styles of baseplates. If your baseplate has removable arms, they must be removed before driving the vehicle, unless the arms can be pinned or padlocked in place. If not secured, the arms could vibrate out.
- Some motorhome chassis have such a tight turning radius that you can damage your motorhome, towed vehicle, tow bar or baseplate while turning sharply. Before getting on the road, test your turning radius in an empty parking lot. Turning too sharply could result in non-warranty damage to your towing system, motorhome and/or towed vehicle.
- Do not back up with the towed vehicle attached or non-warranty damage will occur to your towing system or vehicles.
- The safety cables must connect the towing vehicle to the towed vehicle frame to frame, with the cables crossed, with enough slack for sharp turns. See cable instructions for proper routing. Failure to do so will result in non-warranty damage and/or the loss of the towed vehicle.
- This kit is designed for use with ROADMASTER tow bars and ROADMASTER adapters only. Using this kit with other brands, without an approved ROADMASTER adapter, may result in non-warranty damage or injury.
- Receiver extensions and out-of-level towing situations of 3 inches or more. This can cause the system to swing much higher and lower, causing excessive strain on the tow bar, baseplate and frame. That can cause the towing system to fail, causing property damage, personal injury or even death. If you must use a receiver extension or drop hitch to tow, it will reduce your receiver's weight capacity by 1/3 to avoid damaging your system. Never use more than one extension and/or drop hitch, as this will void your warranty.
- Every 3,000 miles, the owner must inspect all mounting points for cracks or fatigue, and check the fasteners for proper torque, according to the bolt torque requirements chart on the last page of these instructions.
- The owner must follow the vehicle manufacturer's instructions to prepare the vehicle for towing. Failure to do so may cause severe damage to the vehicle.
- This baseplate is only warranted for the original installation. Installing a used baseplate on another vehicle is not recommended and will void the warranty.





BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1


03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com


Important: please use all supplied bolts and parts and read all instructions carefully before beginning this installation. The majority of questions you may have can be answered within the text, and proper installation will ensure safe and secure travel. Now, begin the installation.

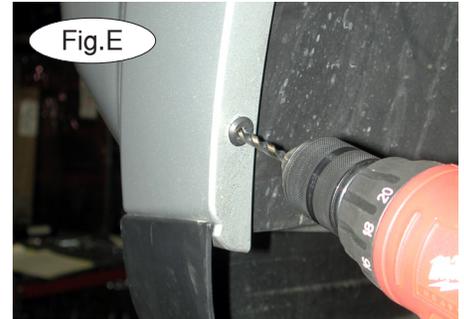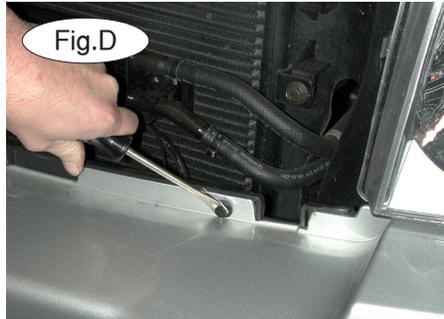

1. Start by removing the six plastic fasteners across the top of the grille (Fig.C).
2. Then, remove the grille by pulling straight up.
3. Remove the four plastic fasteners across the top of the fascia (Fig.D). *Note:* 2005-2007 models only.
4. Using a 1/4" drill bit, drill out the center of the two pop rivets (on each side) which hold the fender liner to the fascia (Fig.E). Remove the pop rivets.

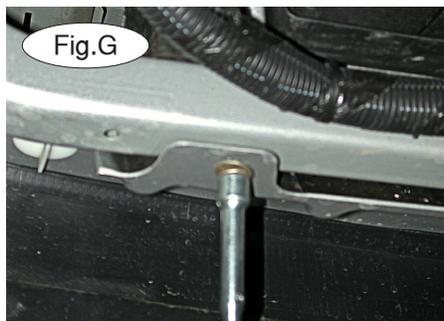

5. On each side, remove the 7mm (head) bolt holding the fascia to the top of the fender (Fig.F).
6. At the bottom of the fascia, remove the three 10mm (head) bolts connecting the fascia to the radiator support (Fig.G).
7. Disconnect the fog lights, if the vehicle is so equipped.
8. Remove the fascia by pulling forward slightly from the side.
9. Remove the two frame rail covers to gain access to the inner frame rail by removing one 10mm (head) bolt from each cover (Fig.H).

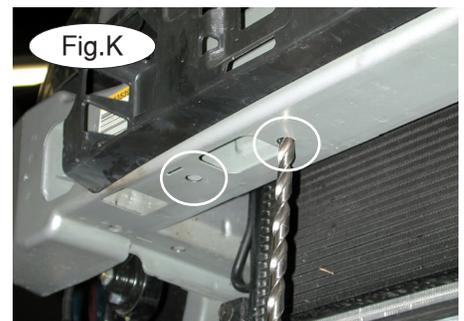

10. Remove the tow hooks (if the vehicle is so equipped) by removing the three 15mm nuts on each side (Fig.I).
11. Next, on each side, bend the retainer clip (Fig.J) on the tow hook studs and remove the tow hook studs.
12. Working on the passenger side, enlarge the two existing holes located on the bottom of the bumper core with a 1/2" drill bit (Fig.K).





BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1




03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

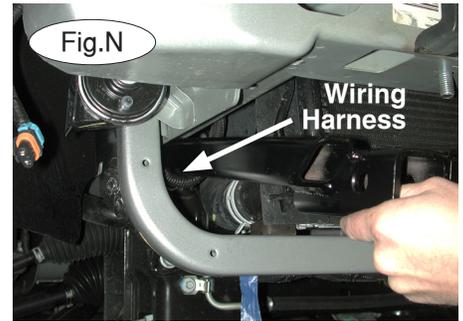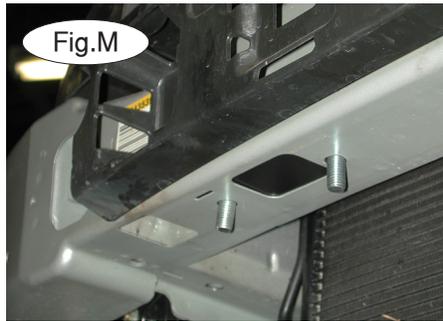

13. Place two $\frac{1}{2}$ " x $1\frac{1}{4}$ " carriage bolts into a 2" x 7" backing plate. (Note: the holes in the backing plate are offset to match the holes in the bumper core.) Now, insert the backing plate into the opening between the two holes you enlarged in step 12 (Fig.L) and thread the bolts through the bumper core (Fig.M).

14. Set the receiver brace in place. Insert the rear portion of the brace between the frame rail and the wiring harness (Fig.N; passenger side only).

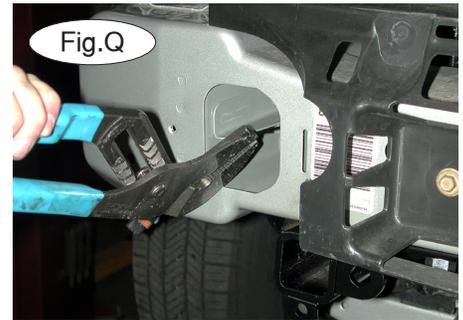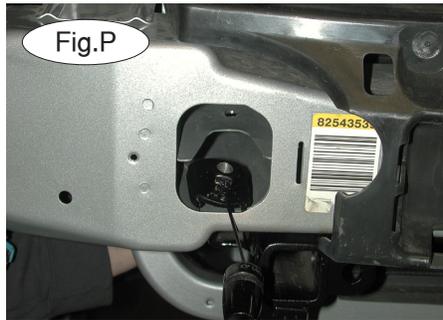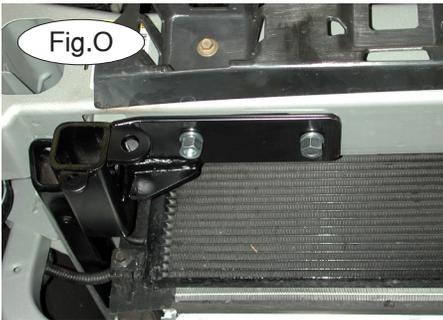


15. Attach the front of the receiver brace with two $\frac{1}{2}$ " lock washers and nuts onto the two $\frac{1}{2}$ " x $1\frac{1}{4}$ " carriage bolts you positioned in step 13 (Fig.O). Finger-tighten only at this time.

16. Repeat steps 10 through 15 to attach the front of the driver's side receiver brace.

17. There are three bolts to hold the rear of each receiver brace in place. First, attach the rear bolt – using the attached wire, move the round backing plate with weld nut through the opening in the front of the frame rail and into position (Fig.P). Thread a $\frac{1}{2}$ " x 3" bolt and $\frac{1}{2}$ " lock washer through the hole in the round backing plate and the existing hole in the frame rail.

Finger-tighten only at this time. Once the bolt is threaded into the backing plate, use pliers to break the wire off the backing plate (Fig.Q).

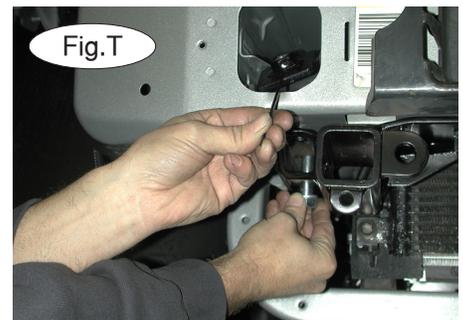

18. To attach the center bolt, use the center hole in the receiver brace and the existing hole in the frame rail as a template. With a $\frac{1}{2}$ " drill bit, drill through the center reinforcement (Fig.R).

19. Insert a $1\frac{1}{4}$ " x 2- $\frac{1}{8}$ " pipe spacer over the hole you just drilled, between the bottom of the frame rail and the center reinforcement (Fig.S). Note: due to manufacturing variances, you may need to grind down the spacer or bend the center reinforcement up.




BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1

03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

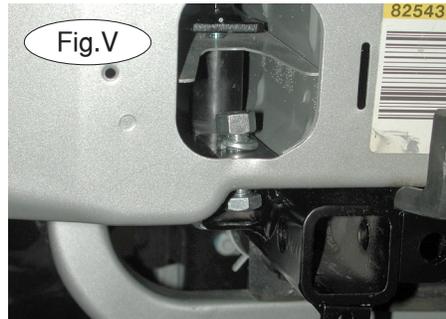

20. Insert a 1/2" x 5" bolt and 1/2" lock washer through the hole you drilled in step 18, through the main brace, the bottom of the frame rail, the pipe spacer, and the center reinforcement.
21. Using the attached wire, position the 2" x 2" backing plate with weld nut on top of the center reinforcement (Fig.T). Thread the 1/2" x 5" bolt through the 2" x 2" backing plate (Fig.U). Finger-tighten only at this time. Once the bolt is threaded into the backing plate, use pliers to break the wire off the backing plate.
22. To attach the third bolt, insert the 1/2" x 1 1/2" bolt through the receiver brace and the bottom of the frame rail (Fig.V). Insert a 1/4"x 1 1/4"x 2 1/2" backing plate with hole, 1/2" lock washer and nut, then finger-tighten only at this time.
23. Repeat steps 17 through 22 to attach the rear of the receiver brace to the other side.
24. Torque all bolts to the specifications at the end of these instructions. *Note:* to prevent noise vibration, check the center attachment on the rear of both receiver braces to ensure there is no slack between the pipe spacers and the center reinforcements.
25. Reattach the two frame rail covers you removed in step 9.
26. Reinstall the fascia by reversing steps 1 through 8. (*Note:* the hardware kit includes four new plastic pop rivets to reattach the fascia to the fender liners, two for each side – Fig.W).
27. Fit the front bracket arms into the front receiver braces, and secure them in place with the supplied 5/8" draw pins and spring pins.
28. Install the tow bar to the mounting bracket according to the manufacturer's instructions. Attach the safety cables to the main brace.

BOLT TORQUE REQUIREMENTS

Note: The torque values represented below are intended as general guidelines. Torque requirements for specific applications may vary. Roadmaster does not warrant this information to be accurate for all applications and disclaims all liability for any claims or damages which may result from its use.

STANDARD BOLTS

Thread Size	Grade	Torque
5/16.....	5.....	13 ft./lb.
3/8.....	5.....	23 ft./lb.
7/16.....	5.....	37 ft./lb.
1/2.....	5.....	56 ft./lb.
5/8.....	5.....	150 ft./lb.

METRIC BOLTS

Thread Size	Grade	Plated / Unplated
8mm-1.0.....	8.8.....	20 ft./lb. 18 ft./lb.
8mm-1.25.....	8.8.....	19 ft./lb. 18 ft./lb.
10mm-1.25.....	8.8.....	38 ft./lb. 36 ft./lb.
10mm-1.5.....	8.8.....	37 ft./lb. 35 ft./lb.

METRIC BOLTS

Thread Size	Grade	Plated / Unplated
12mm-1.25.....	8.8.....	70 ft./lb. 65 ft./lb.
12mm-1.5.....	8.8.....	66 ft./lb. 61 ft./lb.
12mm-1.75.....	8.8.....	65 ft./lb. 60 ft./lb.
14mm-2.0.....	8.8.....	104 ft./lb. 97 ft./lb.

All illustrations and specifications contained herein are based on the latest information available at the time of publication approval. ROADMASTER, INC. reserves the right to make changes at any time without notice in material, specification and models or to discontinue models.



BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1

03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com


2006-2010 Jeep Commander Instructions

This bracket kit fits the 2006-2010 Jeep Commander and the 2005-2010 Jeep Grand Cherokee. Follow the instructions below for the Jeep Commander; for the Jeep Grand Cherokee, see the separate section included in these instructions.



This is one of our crossbar-style baseplates, which allows the visible front portion to be easily removed from the front of the vehicle (Fig.A and Fig.B). The baseplate kit consists of two receiver braces, front braces, and a hardware pack.

Before starting the installation, lay out the kit components in order as they will be used. This will give you a visual idea of how the components work, and will also confirm that everything is present and accounted for.

Important: please use all supplied bolts and parts and read all instructions carefully before beginning this installation. The majority of questions you may have can be answered within the text, and proper installation will ensure safe and secure travel. Now, begin the installation.

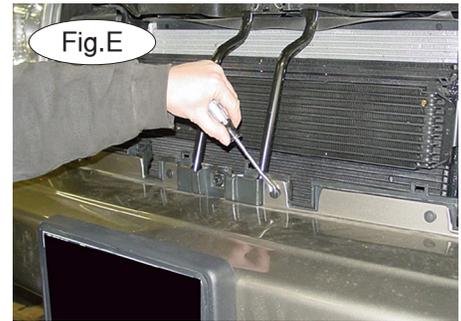

1. Start by removing the six plastic fasteners across the top of the grille (Fig.C).
2. Then, remove the grille by pulling straight up (Fig.D).
3. Remove the four plastic fasteners across the top of the fascia attaching the fascia to the core support (Fig.E).

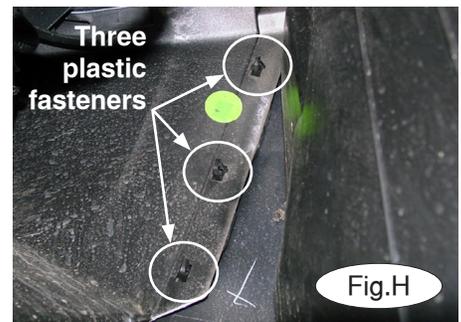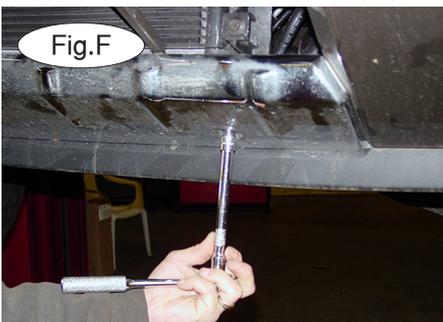

5. Remove three pop rivets on each side of the fender well attaching the fender liner to the fender flair, either by drilling out or by using side cutters (Fig.G).
6. Disconnect the fog lights, if the vehicle is so equipped.
7. There are three plastic fasteners attaching the fender flair to the fascia. They are located on the inside of the fender well. Pinch the plastic tabs together and push out on the fender flair to remove (Fig.H). Repeat for the other side.




BASEPLATE KIT INSTALLATION INSTRUCTIONS



KIT# 1427-1

03/25
RS



ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

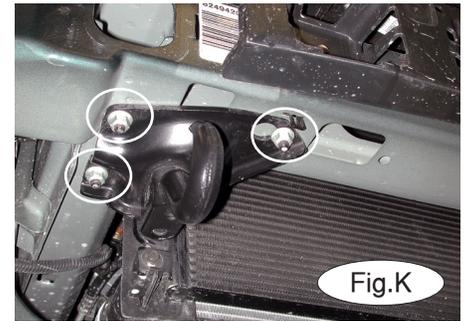

8. Now, on both sides, pull the fender flare slightly out to the side and pull forward on the fascia to remove it (Fig.I).
9. Remove the two frame rail covers to gain access to the inner frame rail by removing one 10mm (head) bolt from each cover (Fig.J)
10. Remove the tow hooks (if the vehicle is so equipped) by removing the three 15mm nuts on each side (Fig.K).
11. Next, on each side, bend the retainer clip (Fig.L) on the tow hook studs and remove the tow hook studs.
12. Working on the passenger side, enlarge the two existing holes located on the bottom of the bumper core with a 1/2" drill bit (Fig.M).
13. Place two 1/2" x 1 1/4" carriage bolts into a 2" x 7" backing plate. *Note:* the holes in the backing plate are offset to match the holes in the bumper core. Now, insert the backing plate into the opening between the two holes you enlarged in step 12 (Fig.N) and thread the bolts through the bumper core (Fig.O).

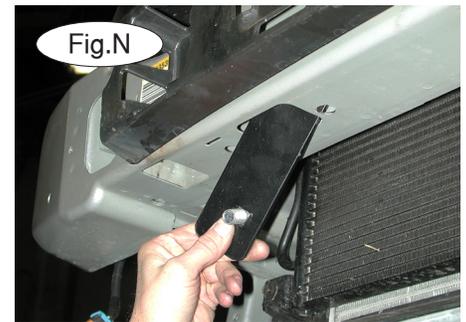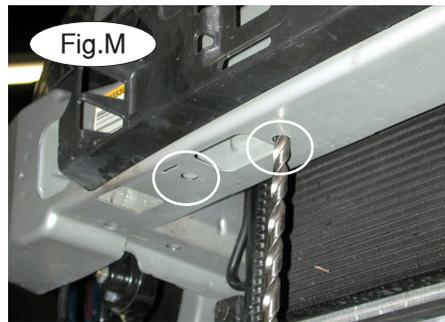

14. Set the receiver brace in place. Insert the rear portion of the brace between the frame rail and the wiring harness (Fig.P; passenger side only).
15. Attach the front of the receiver brace with two 1/2" lock washers and nuts onto the two 1/2" x 1 1/4" carriage bolts you positioned in step 13 (Fig.Q). Finger tighten only at this time.
16. Repeat steps 10 through 15 to attach the front of the driver's side receiver brace.

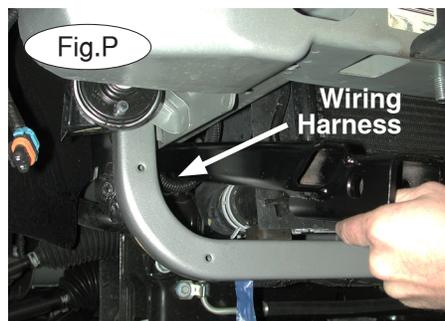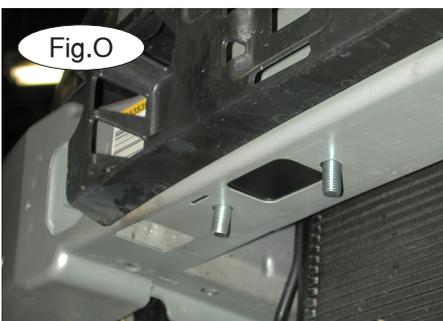





BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1

03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

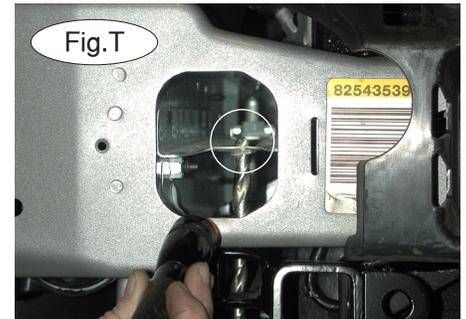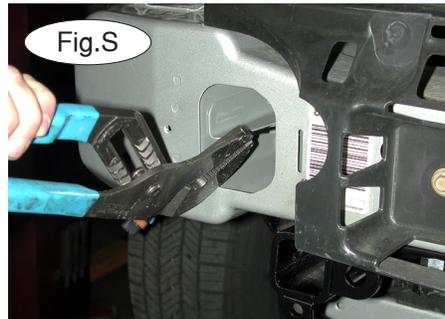




17. There are three bolts to hold the rear of each receiver brace in place. First, attach the rear bolt – using the attached wire, move the round backing plate with weld nut through the opening in the front of the frame rail and into position (Fig.R). Thread a ½" x 3" bolt and ½" lock washer through the hole in the round backing plate and the existing hole in the frame rail. Finger-tighten only at this time. Once the bolt is threaded into the backing plate, use pliers to break the wire off the backing plate (Fig.S).

18. To attach the center bolt, use the center hole in the receiver brace and the existing hole in the frame rail as a template. With a ½" drill bit, drill through the center reinforcement (Fig.T).

19. Insert a 1¼" x 2-1/8" pipe spacer over the hole you just drilled, between the bottom of the frame rail and the center reinforcement (Fig.U).

20. Insert a ½" x 5" bolt and ½" lock washer through the hole you drilled in step 18, through the main brace, the bottom of the frame rail, the pipe spacer, and the center reinforcement.

21. Using the attached wire, position the 2" x 2" backing plate with weld nut on top of the center reinforcement (Fig.V). Thread the ½" x 5" bolt through the 2" x 2" backing plate (Fig.W). Finger tighten only at this time. Once the bolt is threaded into the backing plate, use pliers to break the wire off the backing plate.

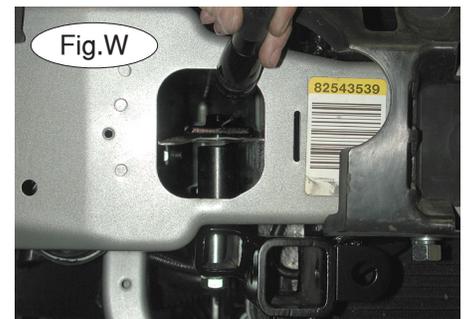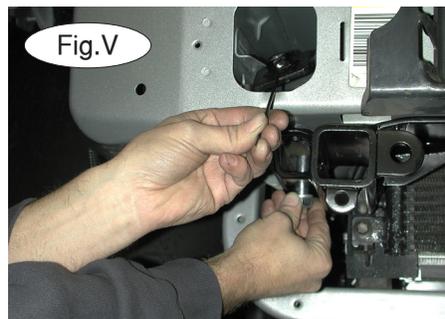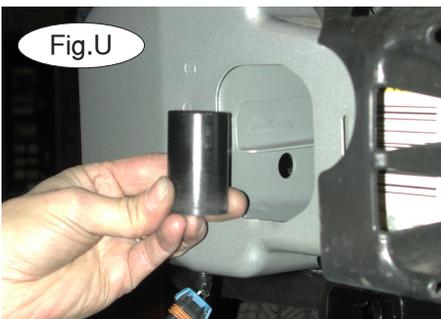




BASEPLATE KIT INSTALLATION INSTRUCTIONS

KIT# 1427-1

03/25
RS

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

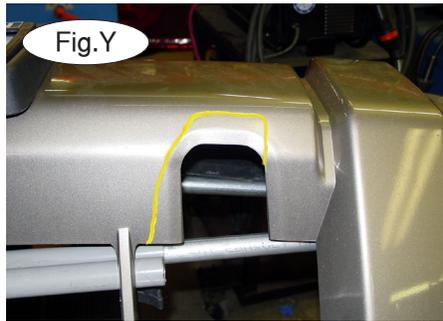

22. To attach the third bolt, insert the 1/2" x 1 1/2" bolt through the receiver brace and the bottom of the frame rail (Fig.X). Insert a 3/16" x 1 1/4" x 2 1/2" backing plate with hole, 1/2" lock washer and nut, then finger-tighten only at this time.
23. Repeat steps 17 through 22 to attach the rear of the receiver brace to the other side.
24. Torque all bolts to the specifications at the end of these instructions. *Note:* to prevent noise vibration, check the center attachment on the rear of both receiver braces to ensure that all slack between the pipe spacers and the center reinforcements is taken up.
25. Reattach the two frame rail covers you removed in step 9.
26. To accommodate the receiver arms, trim the fascia on both sides. Refer to the yellow marker lines for correct trimming (Fig.Y)
26. Reinstall the fascia by reversing steps 1 through 8.

Note: the hardware kit includes six new plastic pop rivets to reattach the fascia to the fender liners, three for each side (Fig.Z).

Note: the light plug mounting bracket will have to be bent back approximately 45 degrees to allow for clearance of the fascia).

27. Fit the front bracket arms into the front receiver braces, and secure them in place with the supplied 5/8" draw pins and spring pins (Fig.AA)
28. Install the tow bar to the mounting bracket according to the manufacturer's instructions. Attach the safety cables to the main receiver brace.



BOLT TORQUE REQUIREMENTS

Note: The torque values represented below are intended as general guidelines. Torque requirements for specific applications may vary. Roadmaster does not warrant this information to be accurate for all applications and disclaims all liability for any claims or damages which may result from its use.

STANDARD BOLTS

Thread Size	Grade	Torque
5/16	5	13 ft./lb.
3/8	5	23 ft./lb.
7/16	5	37 ft./lb.
1/2	5	56 ft./lb.
5/8	5	150 ft./lb.

METRIC BOLTS

Thread Size	Grade	Plated / Unplated
8mm-1.0	8.8	20 ft./lb. 18 ft./lb.
8mm-1.25	8.8	19 ft./lb. 18 ft./lb.
10mm-1.25	8.8	38 ft./lb. 36 ft./lb.
10mm-1.5	8.8	37 ft./lb. 35 ft./lb.

METRIC BOLTS

Thread Size	Grade	Plated / Unplated
12mm-1.25	8.8	70 ft./lb. 65 ft./lb.
12mm-1.5	8.8	66 ft./lb. 61 ft./lb.
12mm-1.75	8.8	65 ft./lb. 60 ft./lb.
14mm-2.0	8.8	104 ft./lb. 97 ft./lb.

All illustrations and specifications contained herein are based on the latest information available at the time of publication approval. ROADMASTER, INC. reserves the right to make changes at any time without notice in material, specification and models or to discontinue models.