



# SEAT ADAPTOR KIT #88237 INSTALLATION INSTRUCTIONS



4046-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

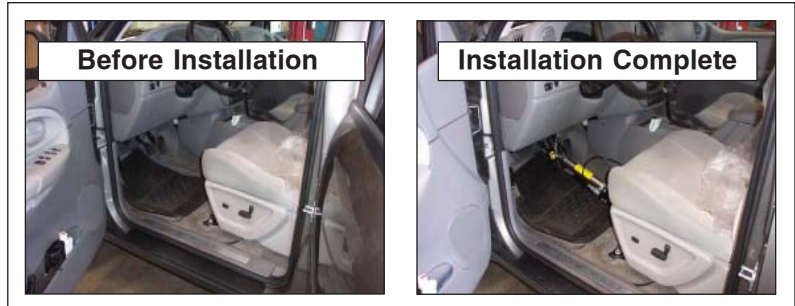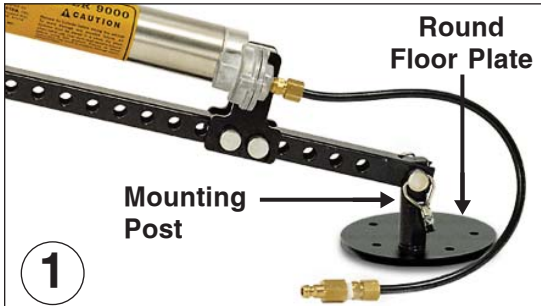

## Instructions

**1.** Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the supplied lock washer and bolt from the floor plate.

**2.** Remove the rear seat track covers (Fig.2) and loosen the two 18mm (head) rear seat track nuts.

**3.** Remove the two front seat track covers (Fig.3) and remove an 18mm nut from the driver's side track and an 18mm (head) bolt from the passenger side track. *Note:* the bolt will not be replaced.

**4.** Place the seat adaptor between the floor and the seat tracks. Replace the driver's side nut, and using the supplied 12mm x 1.75 x 50mm bolt, lock washer and flat washer on the passenger side, bolt the adaptor into place (Fig.4). *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

**5.** Tighten all bolts and replace the seat track covers. Attach the air cylinder.

### Parts List

- (1) 12mm x 1.75 x 50mm bolt
- (1) 12mm lock washer
- (1) 12mm flat washer
- (1) 3/8" lock washer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.