



SEAT ADAPTOR KIT #88265 INSTALLATION INSTRUCTIONS



Part# 85-4064-01 05-10

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

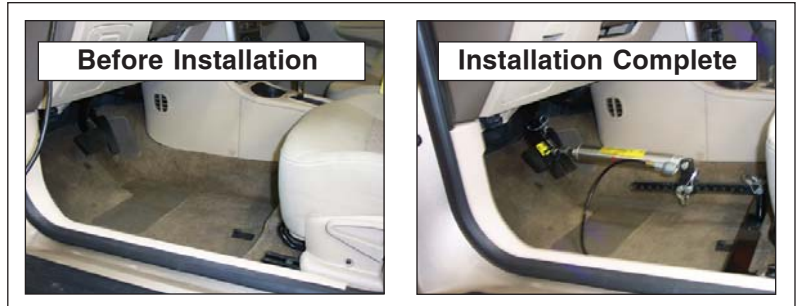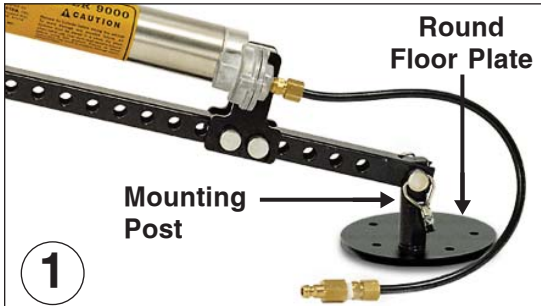

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Now, take off the plastic rear seat track covers (Fig.2) and remove the two 15mm (head) rear seat track bolts. Move the seat all the way back. Then, pull the seat out of the front mounting slots by tilting the seat forward (Fig.3) and lifting it up and out of the slots (Fig.4).
3. Place the seat adaptor over the front seat tracks (Fig.5). Reinstall the seat, reversing steps 1 and 2.

continued on next page

Parts List

- (2) 3/8" x 1 1/4" bolts
- (3) 3/8" lock washers
- (1) 3/8" x 3/4" bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

SEAT ADAPTOR KIT #88265 INSTALLATION INSTRUCTIONS



Part# 85-4064-01 05-10

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

continued from preceding page

Instructions

4. On each side, slide the 2-3/8" stops between the seat track and the seat adaptor and bolt them into place using the supplied 3/8" x 1 1/4" bolts and 3/8" lock washers (Fig.6). *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

5. Attach the air cylinder to the adaptor.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.