



SEAT ADAPTOR KIT #88270 INSTALLATION INSTRUCTIONS



4192-01 01-09

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

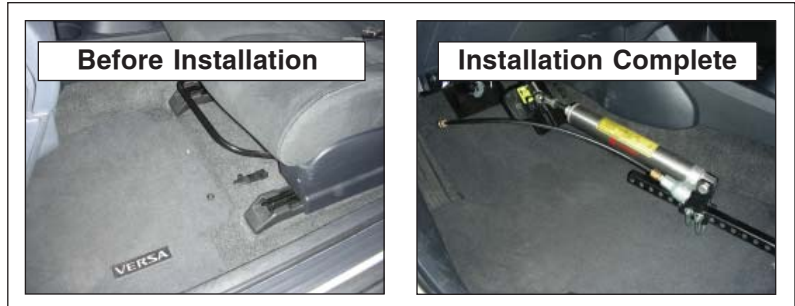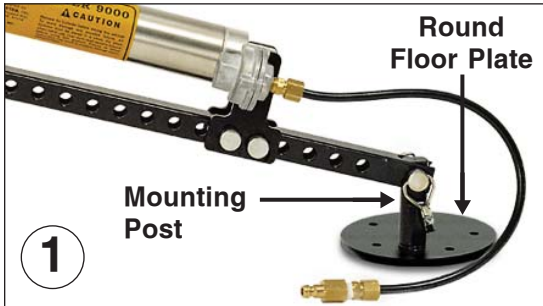

- ### Parts List
- (1) 3/8" x 3/4" bolt
 - (1) 3/8" lock washer
 - (2) 10mm x 1.25 x 40mm bolts
 - (2) 10mm lock washers
 - (2) 1" x 1/2" .188 wall pipe spacers

Instructions

- 1.** Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. *Note:* use the hole that lines up directly with your brake pedal.
- 2.** Pull the floor mat up to remove it from the pull tab. Place the mat slightly forward on the floor of the vehicle (Fig.2). Now, remove the two plastic seat track covers and the two 16mm seat track bolts.
- 3.** Place the seat adaptor between the seat tracks and the floor. *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- 4.** On each side, place a 1" x 1/2" pipe spacer between the seat track and the seat adaptor. On each side, bolt through the seat adaptor, pipe spacer and the seat track using one of the supplied 10mm x 1.25 x 40mm bolts and a 10mm lock washer (Fig.3). *Note:* the floor mat can be reattached to the pull tab by cutting a small hole in the mat so the seat post can pass through it.
- 5.** Attach the air cylinder to the adaptor.