



# SEAT ADAPTOR KIT #88274 INSTALLATION INSTRUCTIONS



4271-00 01-09

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

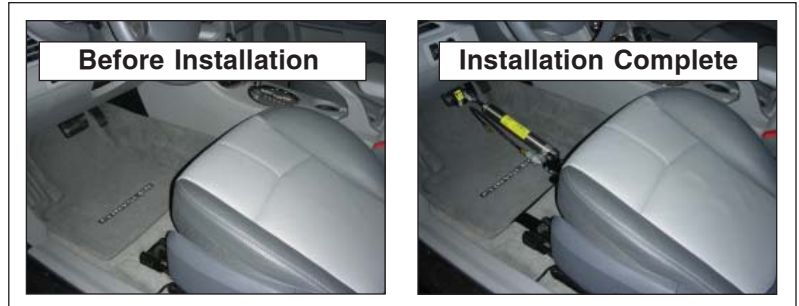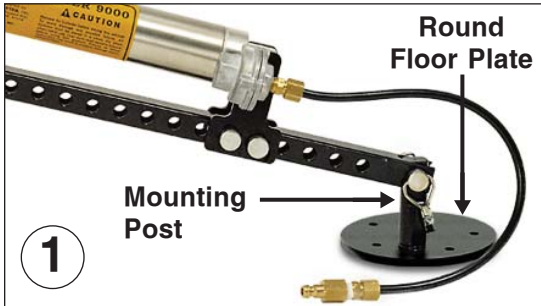

## Instructions

**1.** Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.

**2.** Remove the two front 18mm seat track bolts (Fig.2).

**3.** Place the seat adaptor over the seat tracks and replaced the bolts you removed in step 2 (Fig.3). *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

**4.** The adjustment rod will not be used with this application. remove the two 5/16" bolts attaching the adjustment rod to the air cylinder (Fig.4).

*continued on next page*

## Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (1) 5/8" x 3/4" spacer



## WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.

 1-800-669-9690

# SEAT ADAPTOR KIT #88274 INSTALLATION INSTRUCTIONS



4271-00 01-09

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com



*continued from preceding page*

**5.** Place the 5/8" x 3/4" spacer over the forward hole and replace the 5/16" bolt (Fig.5). *Note:* the rear bolt will not be replaced.

**6.** Attach the air cylinder to the seat adaptor by placing the rear hole over the mounting point and replacing the retainer pin (Fig.6).



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.