
1-800-669-9690 SEAT ADAPTER KIT #88274 INSTALLATION INSTRUCTIONS



4271-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

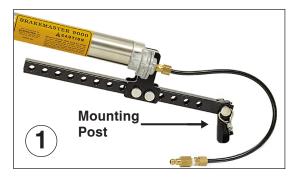









Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x ³/₄" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the two front 18mm seat track bolts (Fig.2).

3. Place the seat adapter over the seat tracks and replaced the bolts you removed in step 2 (Fig.3). *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

4. The adjustment rod will not be used with this application. remove the two 5/16" bolts attaching the adjustment rod to the air cylinder (Fig.4).

continued on next page

Parts List

- (1) 3/8" x ¾" bolt
- (1) 3/8" lock washer
- (1) 5/8" x 3/4" spacer



Failure to follow these instructions can result in property damage, personal injury or even death.

T-800-669-9690 SEAT ADAPTER KIT #88274 INSTALLATION INSTRUCTIONS



4271-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735<u>-9300 www.roadmasterinc.com</u>



continued from preceding page

5. Place the $5/8" \times 3/4"$ spacer over the forward hole and replace the 5/16" bolt (Fig.5). *Note:* the rear bolt will not be replaced.

6. Attach the air cylinder to the seat adapter by placing the rear hole over the mounting point and replacing the retainer pin (Fig.6).



