
## 21-800-669-9690 SEAT ADAPTER KIT #88304 INSTALLATION INSTRUCTIONS



4960-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.con

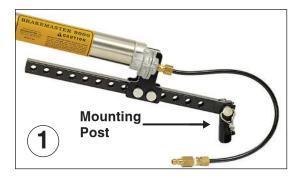



## Instructions

**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Push the front seat all the way forward, remove the rear seat track covers and loosen the rear seat track bolts. Push the seat back to gain access to the front seat tracks.

3. Now, remove the two seat track covers and the two 14mm (head) front seat track bolts (Fig.2).

**4.** Place the seat adapter between the seat tracks and the floor and over the holes you exposed in step 2. Bolt it into place using the two supplied 10mm x 1.25 x 35mm bolts, 10mm lock washers and 3/8" flat washers (Fig.3). Re-tighten the rear seat track bolts.

*Note:* position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The Brake-Master air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

continued on next page





## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x <sup>3</sup>/<sub>4</sub>" bolt
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 3/8" flat washers







4960-02

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

fax 360-735-9300 www.roadmasterinc.com



**5.** Replace the seat track covers and trim to allow clearance for the seat adapter using the red lines in Figure 4 as a guide for trimming.

**6.** Attach the air cylinder to the adapter.

