

SEAT ADAPTER KIT #88313 INSTALLATION INSTRUCTIONS




5280-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc.

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407

fax 360-735-9300

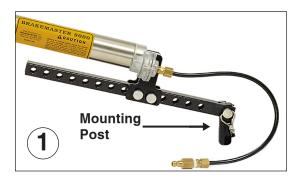





Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 1/2" x 1" x .188 wall pipe spacers
- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers





Instructions

- 1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2. Push the seat all the way back and remove the two seat track covers. Then, remove the two 14mm (head) bolts from the front seat track (Fig.2).
- 3. Place the two supplied $\frac{1}{2}$ " x 1" x .188 wall pipe spacers over the two holes you exposed in the previous step. Then, place the seat adapter over them and bolt into place using the two supplied 10mm x 1.25 x 40mm bolts and two 10mm lock washers (Fig.3). Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The Brake-Master air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- 4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the Brake-Master is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes, depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.