



# SEAT ADAPTOR KIT #88115 INSTALLATION INSTRUCTIONS



2940-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

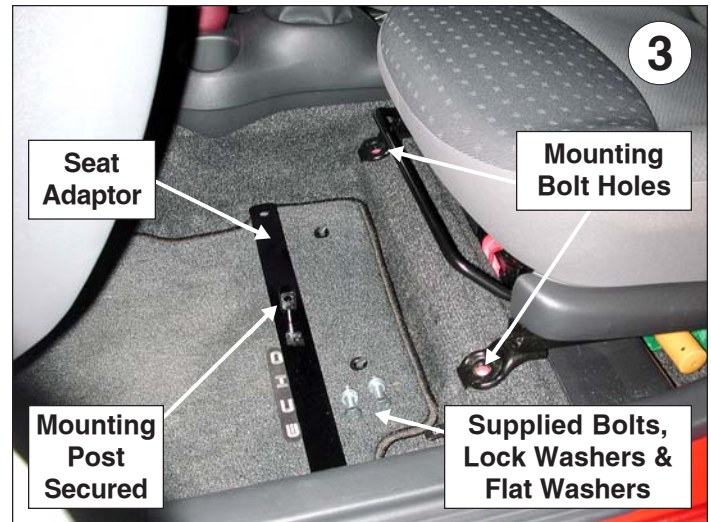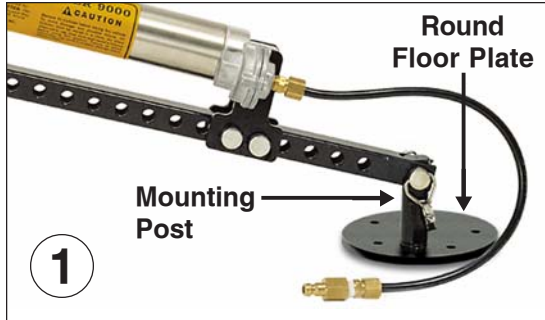

## Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig. 1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two 14mm front seat mounting bolts on each side of the driver's seat (Fig. 2). The mounting post on the seat adaptor is slightly offset, to align with the brake pedal. Check the alignment of the mounting post to the brake pedal, then set the seat adaptor in place under the seat track and over the front seat bolt holes.
3. To secure the seat adaptor, bolt it in place with a supplied 10mm x 1.25 x 35mm bolt, 10mm lock washer and 10mm flat washer on each side (Fig. 3). Tighten the two bolts.

## Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers



### WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.