



SEAT ADAPTOR KIT #88193 INSTALLATION INSTRUCTIONS



3990-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

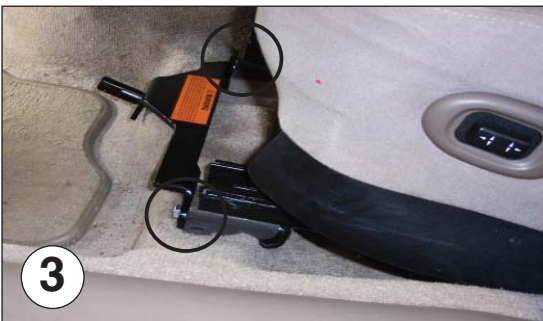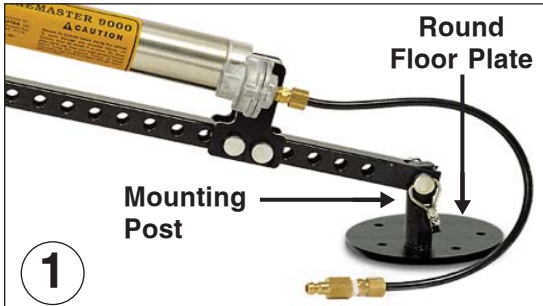

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Pull off the seat track cover. *Note:* this part will not be replaced. Retain the seat track cover in case the braking system is ever removed from the vehicle.
3. Lay out the seat adaptor as shown in Figure 2.
4. Place the supplied 3/8" x 4 1/4" bolts through the seat bracket and seat track (Fig.3). At the rear of the seat track, use the supplied 1-5/8" x 1 1/2" backing plate and 3/8" flat washers, lock washers and nuts to secure the assembly (Fig.4). *Note:* position the adaptor so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
5. Attach the air cylinder to the adaptor.

Parts List

- | | |
|-------------------------|---|
| (2) 3/8" x 4 1/4" bolts | (2) 3/8" flat washers |
| (3) 3/8" lock washers | (2) 3/8" nuts |
| (1) 3/8" x 3/4" bolt | (2) 1-5/8" x 1 1/2" formed backing plates |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.