



1-800-669-9690



SEAT ADAPTOR KIT #88233 INSTALLATION INSTRUCTIONS



3653-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

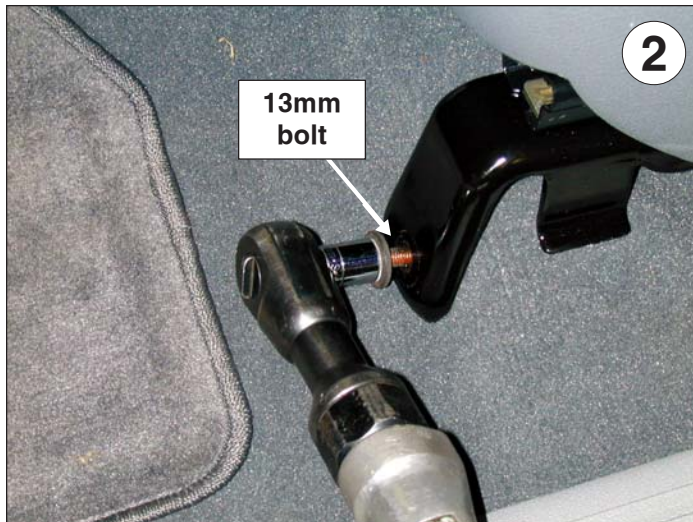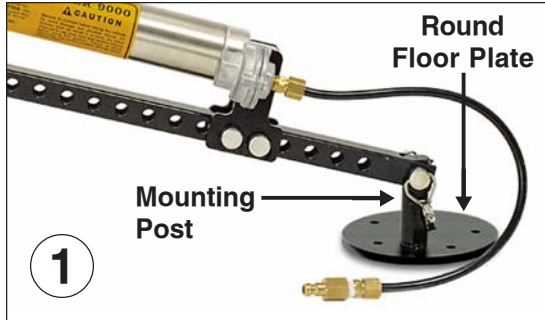

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two 13mm front seat track bolts (one on each side, Fig.2). Set the seat adaptor in place, so that the pre-drilled holes at each end of the seat adaptor align to the holes for the 13mm bolts you removed, and the mounting post (Fig.3) is in a direct line to the brake pedal. Re-install the two 13mm front seat track bolts to secure the adaptor in place.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.