



1-800-669-9690



# SEAT ADAPTOR KIT #88256 INSTALLATION INSTRUCTIONS



Part# 85-3894-01 08-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

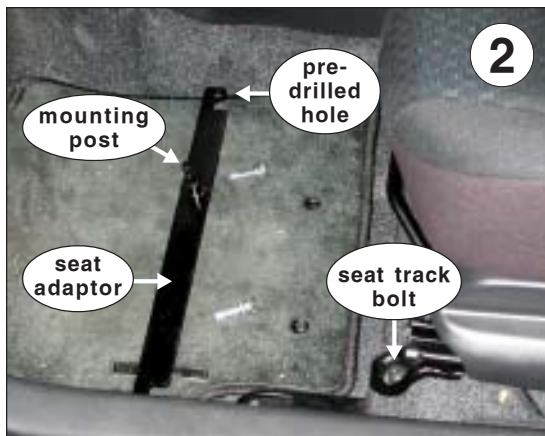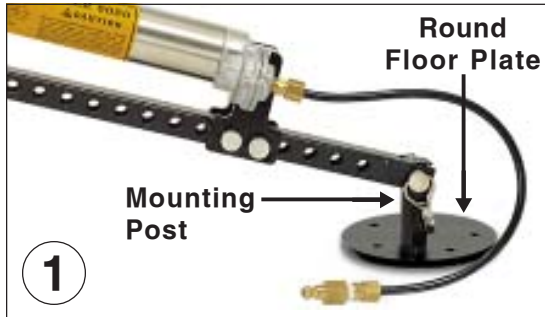

## Parts list

- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer

## Instructions

- 1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
- 2.** Remove the two front 8mm (head) seat track bolts (Fig.2). Position the seat adaptor over the front of the seat tracks, so that the two pre-drilled holes in the adaptor (Fig.2) align to the holes for the bolts you just removed. *Note:* position the adaptor so that the mounting post (Fig.1 and 2) is directly in line to the brake pedal (Fig.3). The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- 3.** Bolt the adaptor into place, using the supplied 10mm x 1.25 x 40mm bolts, lock washers and flat washers (Fig.3).



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.