




# SEAT ADAPTOR KIT #88258 INSTALLATION INSTRUCTIONS



3967-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

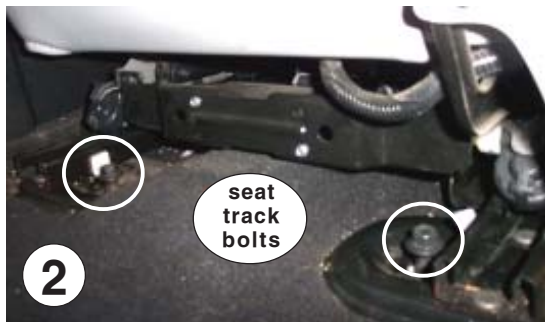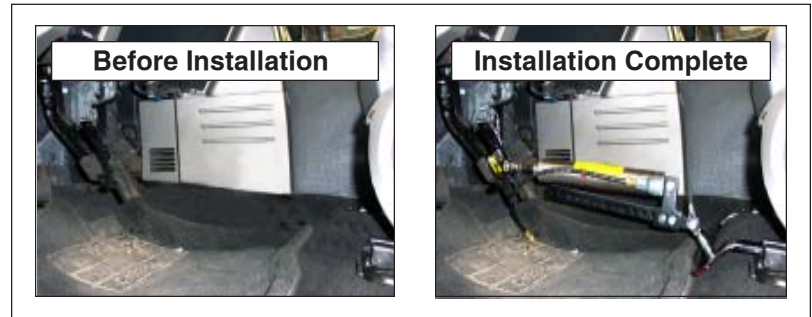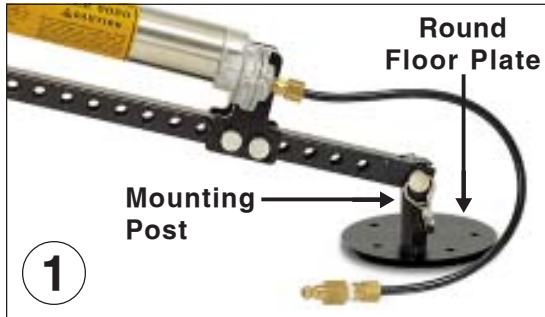

## Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two 15mm (head) seat track bolts (Fig.2).
3. Place 1" x 3/4" pipe spacers over the seat track (Fig.3) and place the seat bracket over the pipe spacers. *Note:* position the adaptor so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. Bolt the seat bracket into place using the 12mm x 1.75 x 50mm bolts and 12mm lock washers (Fig.4).

## Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 12mm x 1.75 x 50mm bolts
- (2) 12mm lock washers
- (2) 3/4" pipe spacers



### WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.