

SEAT ADAPTER KIT #88259 INSTALLATION INSTRUCTIONS




4002-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc.

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407

fax 360-735-9300

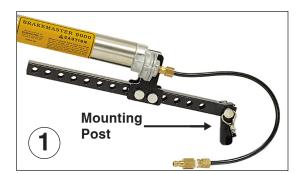











Instructions

- 1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2. Loosen the two T45 Torx rear seat track bolts (Fig.1).
- 3. Remove the two T45 Torx front seat track bolts (Fig.2).
- **4.** Bolt the seat bracket between the floor and the seat tracks (Fig.4). Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- **5.** Attach the air cylinder to the adapter.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer

