



SEAT ADAPTOR KIT #88260 INSTALLATION INSTRUCTIONS



Part# 85-4013-00 02-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

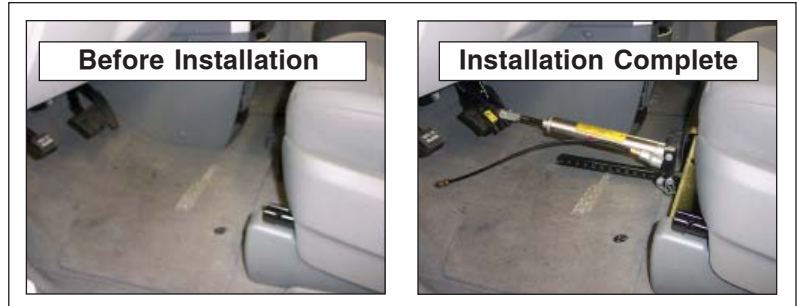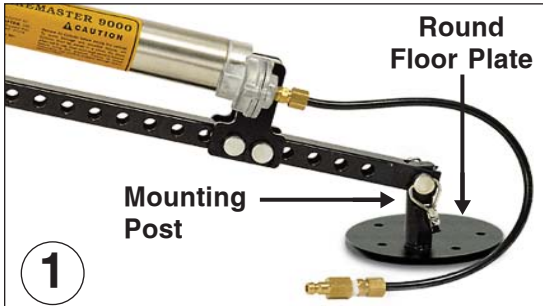

- ### Parts List
- (1) 3/8" x 3/4" bolt
 - (1) 3/8" lock washer

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two front 15mm seat track nuts located on the bottom side of the seat tracks (Fig.2).
3. Place the seat adaptor over the bolts and replace the nuts (Fig.3). *Note:* position the adaptor so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. Attach the air cylinder to the adaptor.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.