




SEAT ADAPTOR KIT #88266 INSTALLATION INSTRUCTIONS



Part# 85-4148-00 07-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

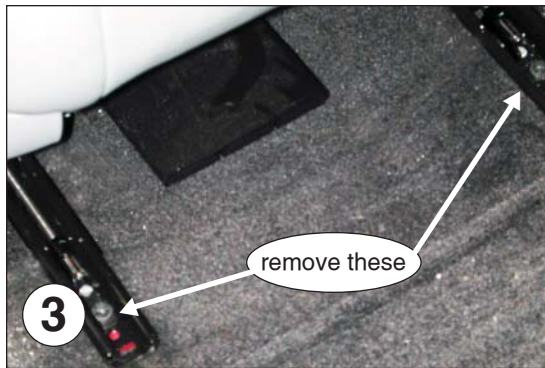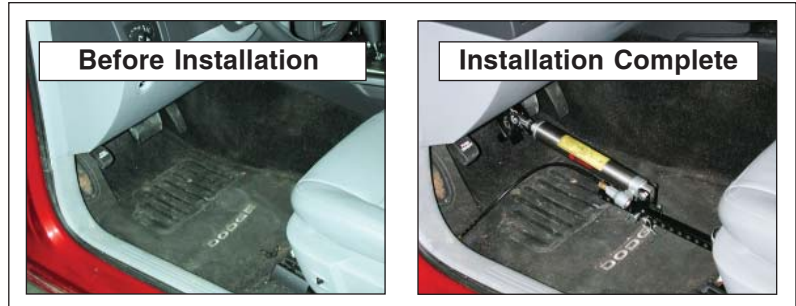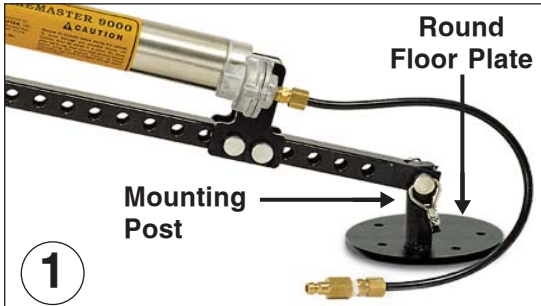

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the two front seat track bolts using a 12 pt. 10mm socket (Fig.2). Loosen the two rear seat track bolts using the same socket (Fig.3).
3. Place the seat adaptor between the floor and the front seat tracks and bolt it into place using the two supplied 10mm x 1.5 x 35mm Allen head bolts and 10mm lock washers (Fig.4). Tighten the rear seat track bolts. *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. Attach the air cylinder to the adaptor.

Parts List

- | | |
|-----------------------|--|
| (1) 3/8" x 3/4" bolt | (2) 10mm x 1.5 x 35mm Allen head bolts |
| (1) 3/8" lock washer | |
| (2) 10mm lock washers | |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.