



SEAT ADAPTOR KIT #88275 INSTALLATION INSTRUCTIONS



4278-00 01-09

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

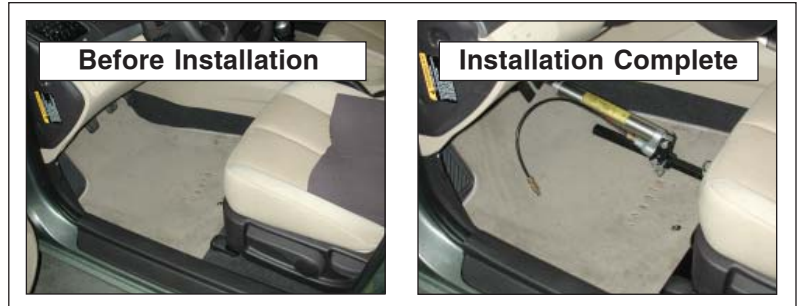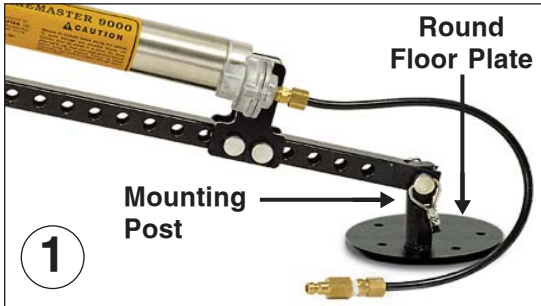

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Remove the two front plastic seat track covers. Remove the two front 14mm seat track nuts (Fig.2).

3. Slide the seat forward as far as it will go, and remove the rear seat track covers. Remove the two rear seat track nuts (Fig.3).

4. Lift the front seat tracks off the studs and place the seat adaptor over the exposed studs. *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Now, replace the front and rear nuts and torque to the manufacturer's recommended specifications. Replace the front and rear seat track covers (Fig.4).

5. Attach the air cylinder.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.